

AMASS STORGE BATTERY(GTX2000) SETTING

Important: Choose General Lithium as battery type for GTX2000


Choose AMASS for GTX2500/GTX5000.

1. Equipment Interface Instruction





	Battery Postive---- Connect to the inverter or another AMASS battery postive
	Battery Negtive---- Connect to the inverter or another AMASS battery postive
	RS485---- Communicate link between battery in parallel
	CAN---- Battery to Inverter communication port
	LED indicating lamp----Warning and SOC
	Power Switch --- Press the power button after the connection is correct
	Dip Switch---6 ADD switches, Dip 1~3 to define Master/Slave mode, Dip 4~6 to define slave battery.

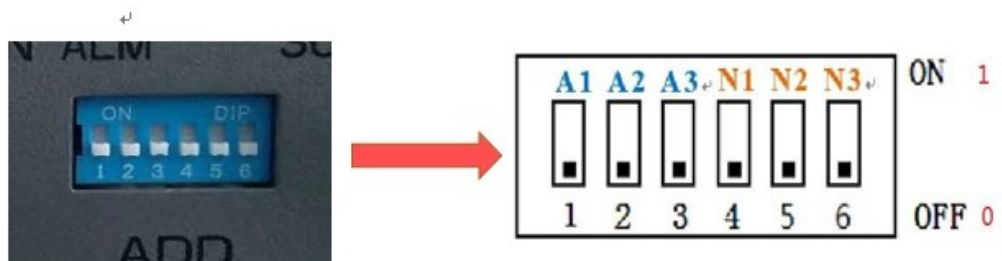


2. Especially introduce---Dip Switch








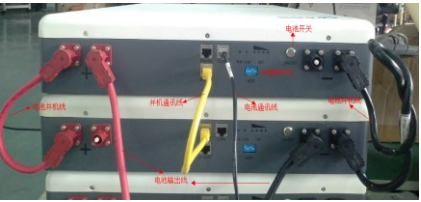



Dip1~3 to define Master/Slave mode : The Master is binary 0 , the Slave Battery from 1-3

Dip4~6 to define slave battery : Slave Battery number
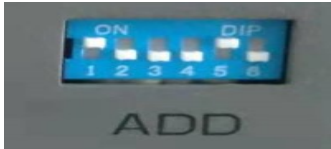
<p>1* AMASS Battery</p> 	Dip Switch	1-A1	2-A2	3-A3	4-N1	5-N2	6-N3
		OFF	OFF	OFF	OFF	OFF	OFF
	Battery – Master						


<p>2* AMASS Battery</p> 	Dip Switch	1-A1	2-A2	3-A3	4-N1	5-N2	6-N3
		OFF	OFF	OFF	ON	OFF	OFF
	Battery – Master						
		ON	OFF	OFF	ON	OFF	OFF
Battery – Slave 1							

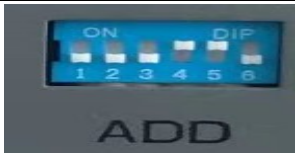3* AMASS Battery	Dip Switch	1-A1	2-A2	3-A3	4-N1	5-N2	6-N3
		Battery – Master	OFF	OFF	OFF	OFF	ON
							
	Battery – Slave 1	ON	OFF	OFF	OFF	ON	OFF
							
	Battery – Slave 2	OFF	ON	OFF	OFF	ON	OFF
							


4* AMASS Battery	Dip Switch	1-A1	2-A2	3-A3	4-N1	5-N2	6-N3
		Battery – Master	OFF	OFF	OFF	ON	ON
							
	Battery – Slave 1	ON	OFF	OFF	ON	ON	OFF
							
	Battery – Slave 2	OFF	ON	OFF	ON	ON	OFF
							
	Battery – Slave 3	ON	ON	OFF	ON	ON	OFF
							

3. Turn on Battery

After confirm the batteries, PV, Grid connection, Press the on button, Choose **General Lithium battery**:

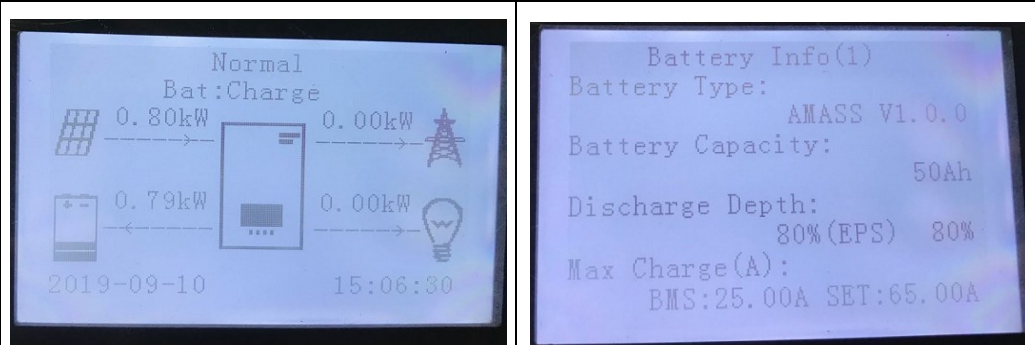

Successful communication. Choose System Information---Battery information , You will see all battery information;

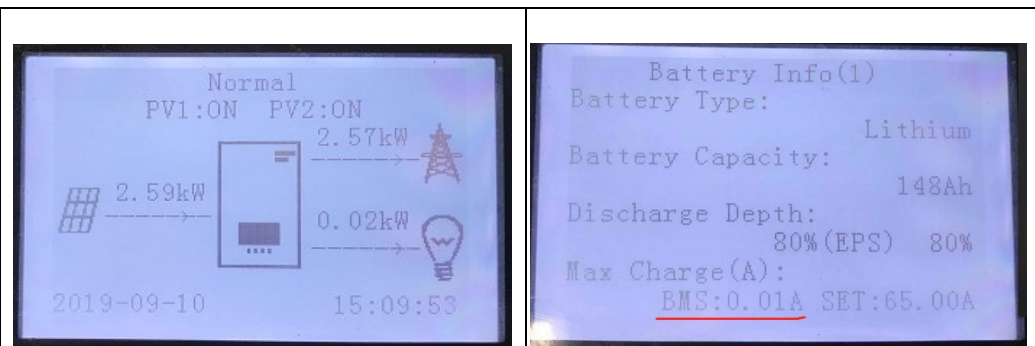

Battery Communication Fail. The battery icon is gone. Please Check battery type and Dip switch.

If any help is needed, please contact SOFAR technical support.