



It's mandatory to set the country code while commissioning SOFARSOLAR inverters according to requirements of local authority.

1. Check current country setting

"Back" →

"Up" ↑

"Down" ↓

1 Enter setting
2 Event List
3 System Info
4 System time
5 Software Update

"OK" →

"Up" ↑

"down" ↓

1 Inverter type
2 Serial number
3 Soft version
4 Hard version
5 country

"OK" →

2. Change country setting

"Back" →

"Up" ↑

"Down" ↓

1 Enter setting
2 Event List
3 System Info
4 System time
5 Software Update

"OK" →

"Up" ↑

"Down" ↓

1 Set Time
2 Clean Energy
3 Clean Events
4 Set Country
5 Remote Control
6 Relay Command
7 EnSet country

"OK" →

Input Password!

"OK" →

**** Input 0001 0001

"OK" →

success

"Back" →

Input Password

"Up" ↑

"Down" ↓

"Back" →

1 Set Time
2 Clean Energy
3 Clean Events
4 Set Country
5 Remote Control
6 Relay Command
7 EnSet country

"OK" →

** Input 22 22

"OK" →

Press "Up" or "Down" to change the value of the first digit. Press "OK" to switch to second digit. Press "Up" or "Down" to change the value of the second digit. After inputting all digit press "OK" to confirm. 22 is the country code for Europe general. Restart your inverter to make the country code effective.