


REV.	Description
0.0	首次发行
	罗西 2017/2/7

REV.	Description


描述	单相电表DDSU666快速安装指南		
料号	614.00200.00		
单位	mm	页次	

浙江艾罗电源有限公司  
SolaX Power Co.,Ltd.  
Q-OP-SC-01-02 V1.0

REV.	Description

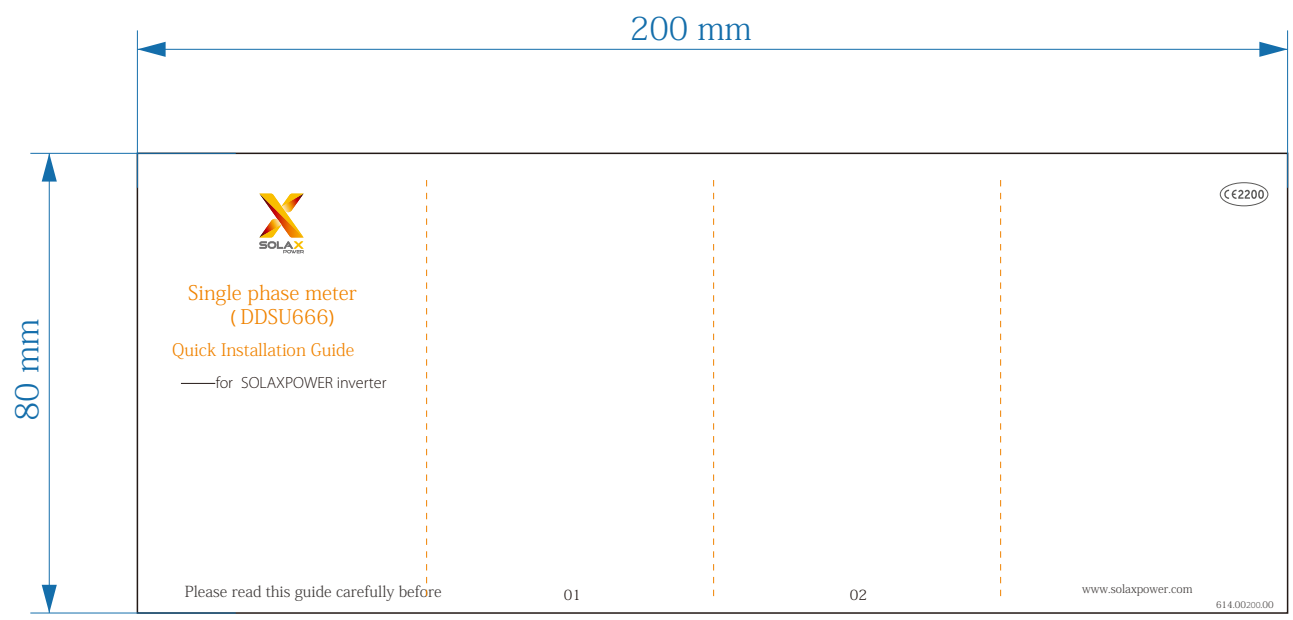


如图折叠出货

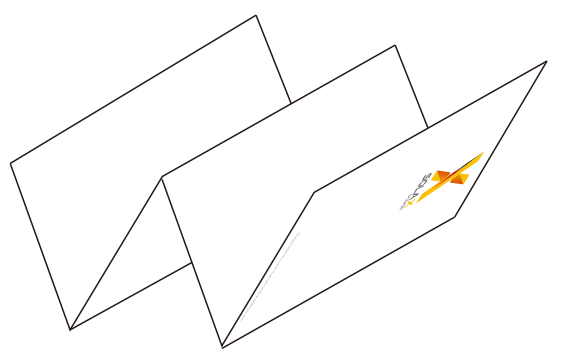

- 技术要求:
- 1.材质80g双胶纸,彩色打印,正反打印
  - 2.未注尺寸公差按 +- 1.5mm
  - 3.图面、字体印刷清晰、无偏移、无毛边、不起边、油墨不脱落
  - 4.字体颜色为PANTONE Black C,无边框,底色为白色
  - 5.符合RoHS要求

描述	单相电表DDSU666快速安装指南
材料	铜版纸
料号	614.00200.00
单位	mm 页次

设计	罗西 2017/2/7
审核	朱娴红 2017/2/7
核准	朱娴红 2017/2/7
浙江艾罗电源有限公司	

 




## Single phase meter (DDSU666)

### Quick Installation Guide

 — for SOLAX Power inverter



Please read this guide carefully before use.


## I Introduction

The single phase meter can work together with several series of inverter. With it, Solax consumer can monitor the energy consumption and feed in throughout the whole day. The meter is compatible with the following Solax inverter X-Hybrid, X1 series(3.0kw-5.0kw), X1-Hybrid, X1-Retro Fit.

\*The instrument must be conducted by professional installation and maintenance.


## II Meter's wiring diagram

Please refer to the below wiring diagram of single phase meter in the circuit.

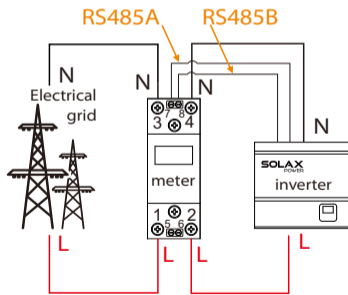

### III Mounting


Mount the rail on the wall, then fix the meter on the rail.

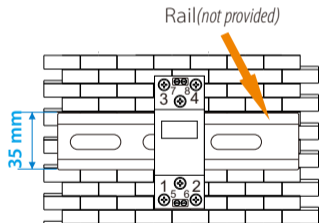

3


### IV Wiring Connection

Step 1: L/N wires connection.

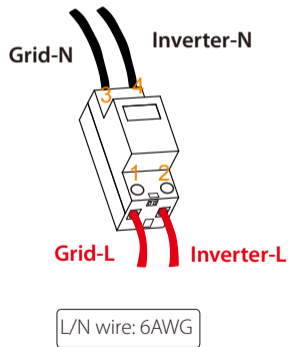

4


Step 2: Cable connection. Insert the cable into the meter. According to the meter definition from the inverter, plug the other side of the cable into the meter port on the inverter.

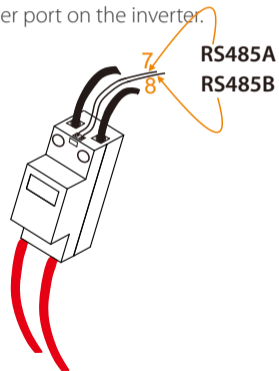

5

Please check the related inverter user manual for the RS485 definitions of meter.

### V Overview

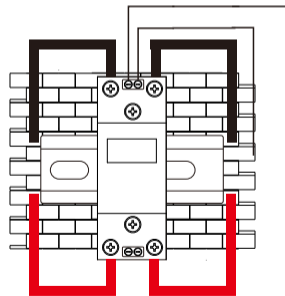

6