For the operator

Operating instructions



uniSTOR

VIH RW GB 500 BES VIH RW GB 800 BES

GB, IE



Contents

Contents

1	Safety	. 3
1.1	Intended use	. 3
1.2	General safety information	. 3
2	Notes on the documentation	. 5
2.1	Observing other applicable	
	documents	
2.2	Storing documents	
2.3	Applicability of the instructions	
3	Product description	
3.1	Serial number	. 5
3.2	Information on the identification	
	plate	
3.3	CE label	
3.4	Hot Water Association	
4	Functionality	6
4.1	Setting the hot water	_
4.0	temperature	. 6
4.2	Switching off the hot water	. 6
5	generation Troubleshooting	
5 .1	Detecting and rectifying faults	
6	Care and maintenance	_
6.1	Maintenance	
6.2	Caring for the product	
0.2 7	Decommissioning	
7.1	Temporarily decommissioning	•
1.1	the product	. 7
7.2	Permanently decommissioning	•
	the product	. 7
8	Recycling and disposal	
9	Guarantee and customer	
	service	. 7
9.1	Guarantee	. 7
9.2	Customer service	. 7
Appe	endix	. 8
Α	Troubleshooting	
Inde		



1 Safety

1.1 Intended use

There is a risk of injury or death to the user or others, or of damage to the product and other property in the event of improper use or use for which it is not intended

The product is intended as a system component for hot water generation and storage for closed central heating installations

Intended use includes the following:

- observance of the operating instructions included for the product and any other system components
- compliance with all inspection and maintenance conditions listed in the instructions.

This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children must not play with the product. Cleaning and user maintenance work must

not be carried out by children unless they are supervised.

Any other use that is not specified in these instructions, or use beyond that specified in this document shall be considered improper use. Any direct commercial or industrial use is also deemed to be improper.

Caution.

Improper use of any kind is prohibited.

1.2 General safety information

1.2.1 Installation by skilled tradesmen only

The installation, inspection, maintenance and repair of the product, as well as the gas ratio settings, must only be carried out by a competent person.

1.2.2 Danger caused by improper operation

Improper operation may present a danger to you and others, and cause material damage.

- Carefully read the enclosed instructions and all other applicable documents, particularly the "Safety" section and the warnings.
- Only carry out the activities for which instructions are

1 Safety

<u>^</u>

provided in these operating instructions.

1.2.3 Risk of death due to changes to the product or the product environment

- Never remove, bridge or block the safety devices.
- ► Do not tamper with any of the safety devices.
- ▶ Do not damage or remove any seals on components.
- ▶ Do not make any changes:
 - The product itself
 - The water and electricity supply lines
 - to the expansion relief valve
 - to the drain lines
 - to constructional conditions that may affect the operational reliability of the product

1.2.4 Risk of injury and material damage due to maintenance and repairs carried out incorrectly or not carried out at all

- Never attempt to carry out maintenance work or repairs on your product yourself.
- Faults and damage should be immediately rectified by a competent person.
- Adhere to the maintenance intervals specified.

1.2.5 Risk of material damage caused by frost

- Ensure that the heating installation always remains in operation during freezing conditions and that all rooms are sufficiently heated.
- If you cannot ensure the operation, have a competent person drain the heating installation



Notes on the documentation 2

2 Notes on the documentation

2.1 Observing other applicable documents

 You must observe all operating instructions enclosed with the system components.

2.2 Storing documents

Keep this manual and all other applicable documents safe for future use.

2.3 Applicability of the instructions


These instructions apply for the following only:

Product article number

VIH RW GB 500 BES	0010019228
VIH RW GB 800	0010019229
BES	

3 Product description

3.1 Serial number

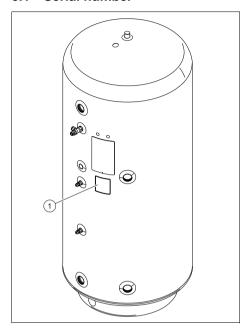

You can find the serial number on the identification plate (1), which is located on the cylinder below the electronics box.

3.2 Information on the identification plate

The identification plate is attached to the product at the factory.

The identification plate keeps record of the country in which the product is to be installed.

This product meets the requirements of standard EN 12897:2006.

4 Functionality

3.3 CE label



The CE label shows that the products comply with the basic requirements of the applicable directives as stated on the identification plate.

The declaration of conformity can be viewed at the manufacturer's site.

3.4 Hot Water Association

Vaillant is a full member of the Hot Water Association and promotes the scheme in association with its cylinder range. Details are available on the web site www.vaillant.co.uk



4 Functionality

4.1 Setting the hot water temperature

Conditions: With controller

► Observe the instructions for the controller. Depending on the controller, you can set the hot water temperature on the controller.

Conditions: Without controller

Consult your competent person to adjust the hot water temperature on the cylinder.

4.2 Switching off the hot water generation

Switch off the heat generator or the hot water generation at the heat generator or at the controller.

5 Troubleshooting

5.1 Detecting and rectifying faults

If problems occur whilst operating the product, you can carry out certain selfchecks with the aid of the table in the appendix.

Troubleshooting

If the product is not functioning correctly, even though you have checked the points listed in the table, contact a competent person.

6 Care and maintenance

6.1 Maintenance

An annual inspection of the product carried out by a competent person is a prerequisite for ensuring that the product is permanently ready and safe for operation, reliable, and has a long working life.

6.2 Caring for the product



Caution.

Risk of material damage caused by unsuitable cleaning agents.

- ▶ Do not use sprays, scouring agents, detergents, solvents or cleaning agents that contain chlorine.
- Clean the casing with a damp cloth and a little solvent-free soap.

7 Decommissioning

7.1 Temporarily decommissioning the product

- Temporarily decommission the product only if there is no risk of frost.
- Switch off the heat generator or the hot water generation at the heat generator or at the controller.

7.2 Permanently decommissioning the product

Employ a competent person to permanently decommission the product.

8 Recycling and disposal

The competent person who installed your product is responsible for the disposal of the packaging.

If the product is identified with this symbol:

- ► In this case, do not dispose of the product with the household waste.
- Instead, hand in the product to a collection centre for old electrical or electronic appliances.

If the product contains batteries that are marked with this symbol, these batteries may contain substances that are hazardous to human health and the environment.

► In this case, dispose of the batteries at a collection point for batteries.

9 Guarantee and customer service

9.1 Guarantee

Vaillant provide a full parts and labour guarantee for this appliance - please see quarantee card for details.

The appliances must be installed in accordance with The Water Regulations of:

- England and Wales: Water (supply and fittings) Regulations 1999 within England and Wales
- Scotland: The Water Byelaws
- Eire: Compliance with IS standards and Local Council regulations

Compliance with the Building regulations:

- England and Wales
- Scotland
- Northern Ireland
- Eire

Terms and conditions apply to the guarantee, details of which can be found on the guarantee registration card included with this appliance.

Failure to install and commission this appliance in compliance with the manufacturer's instructions will invalidate the guarantee (this does not affect the customer's statutory rights).

9.2 Customer service

To ensure regular servicing, it is strongly recommended that arrangements are made for a Maintenance Agreement. Please contact Vaillant Service Solutions for further details:

Telephone: 0330 100 3461

Appendix

Appendix

A Troubleshooting

Fault	Solution
Leak at the product	If possible, catch the liquid in a vessel and inform a com- petent person.
Hot water temperature too low.	Check the hot water temperature setting on the controller and check whether the heat generator has been switched on. If the problem persists, inform a competent person.
Leak at the expansion relief valve.	Inform a competent person.

Index

Index

A
Article number 5
Caring for the product6
CE label6
D
Decommissioning 7
Permanently 7
Documents5
F
Frost4
I
Identification plate5
Intended use3
Isolator devices
M
Maintenance4, 6
P
Product
Permanently decommissioning 7
R
Repair4
S
Serial number5
Setting the cylinder temperature6
Switching off
Т
Troubleshooting6



0020235302_00 17.02.2016

Vaillant Ltd.

Nottingham Road ■ Belper ■ Derbyshire ■ DE56 1JT Telephone 0330 100 3461 info@vaillant.co.uk ■ www.vaillant.co.uk

© These instructions, or parts thereof, are protected by copyright and may be reproduced or distributed only with the manufacturer's written consent. We reserve the right to make technical changes.