


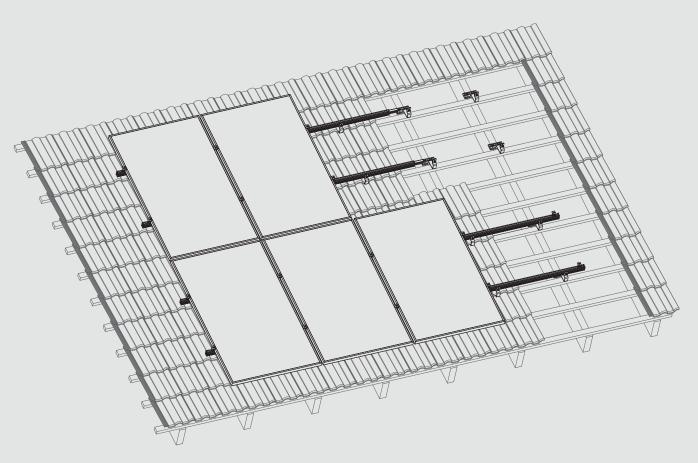

# EN | Installation instructions



EN | Read these installation instructions carefully before starting the installation! Only competent, qualified persons are allowed to carry out the installation!



Mounting system for the installation of framed PV modules with a frame thickness between 30 and 50 mm on pitched roofs with the following characteristics:

- Roof pitch 5° 60° (solar fasteners) or 20°-60° (roof hooks).
- For roof pitches below 20° the permissible roof pitch of the used tile type shall apply.
- Various tile roofs (pan tile, flat tile, interlocking tile, shingle tile, etc.) on wood substructure.
- PV assembly in Portrait and Landscape is possible.

A proof of stability of the roof considering the additional loads from the photovoltaic system must be on hand before the assemblv.

#### Installation guideline

To compensate the linear expansion of modules and mounting system, an interruption should be planned every 12m.

Please observe the specifications issued by the manufacturers of the modules, the manufacturers of the roofing, as well as the local regulations for woodwork. Do not use the installed roof fixations as stepping aid.

For installation, follow the requirements referring to lightning and overvoltage protection for photovoltaic systems, as well as the requirements on fire protection.

If the installation takes place in a distance of 10 km to the coasts, we advise against the use of galvanised components.

For further information, please contact your sales representative or the Technical Department of Renusol.

#### Installation instructions

Please, carefully read the last version of the installation instructions, before starting the installation. First, familiarise yourself with the system components. Check the condition of the roof construction before starting the installation. This includes quality and thickness of rafters, purlins and the roof sealing. The building structure must be able to safely and durably bear the additional loads of the photovoltaic system. During the installation, in particular while working on the roof, be sure to observe the relevant



Check the structural loadability of the PV system before starting the installation. The building must be able to bear the additional weight health and safety regulations and please follow the relevant professional rules.

The figures and texts in the installation instructions correspond to current technology at the time of printing. Printing errors are possible and we reserve the right to make technical changes. The individual installation instructions are merely recommendations in accordance with the current state of the art and are based on the experience of how systems by Renusol can be installed. If any special characteristics of the roof or object need to be considered, please consult specialists such as roofers or structural engineers, if necessary.

Check for the current version of our installation instructions on our website at www. renusol.com. Here, you can also find instructions in additional languages, if required.

#### Tests/certificates:

- MCS012 (IK0197)

#### Other applicable documents

"General installation, maintenance and assembly instructions"

"Safety instructions for installation guide" "Terms of warranty and exclusion of liabi-


These documents are available in: www. renusol.com

#### Terms of warranty:


Renusol's warranty only applies if the original, complete Renusol system is used and the terms of warranty are met. For the legally provided liability for defects/warranty, please see the General Terms and Conditions issued by Renusol.


07/2023 - Creation of installation instructions

12/2023 - New maintenance article R300000/R900274

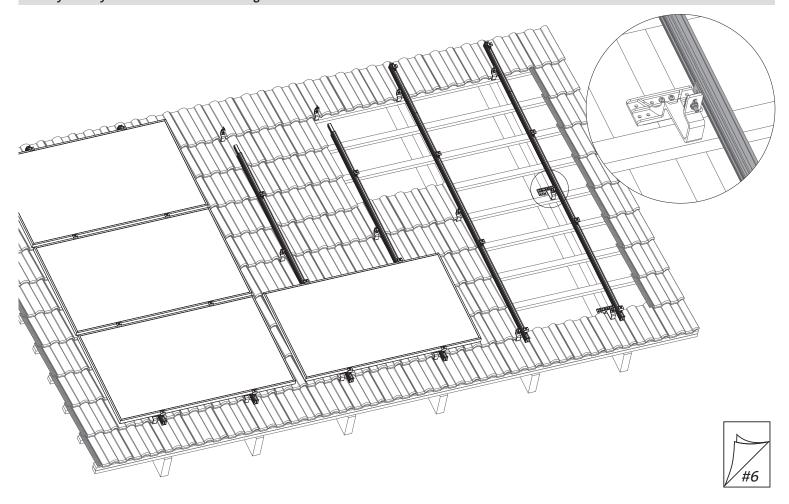





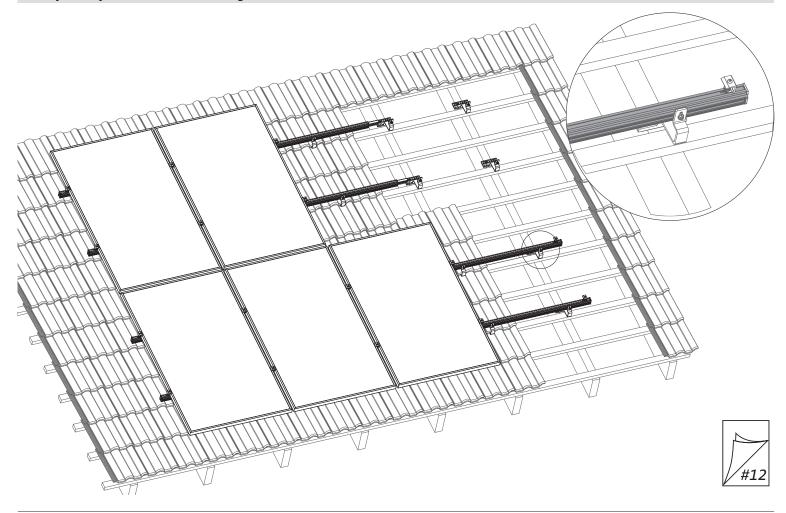

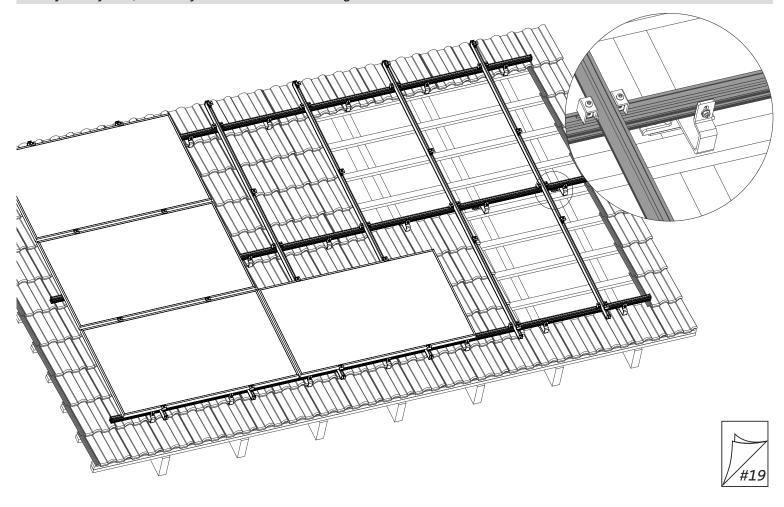





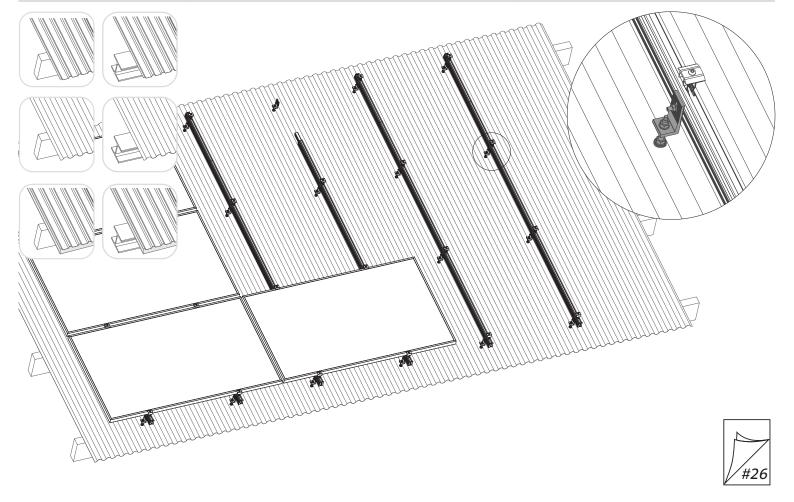


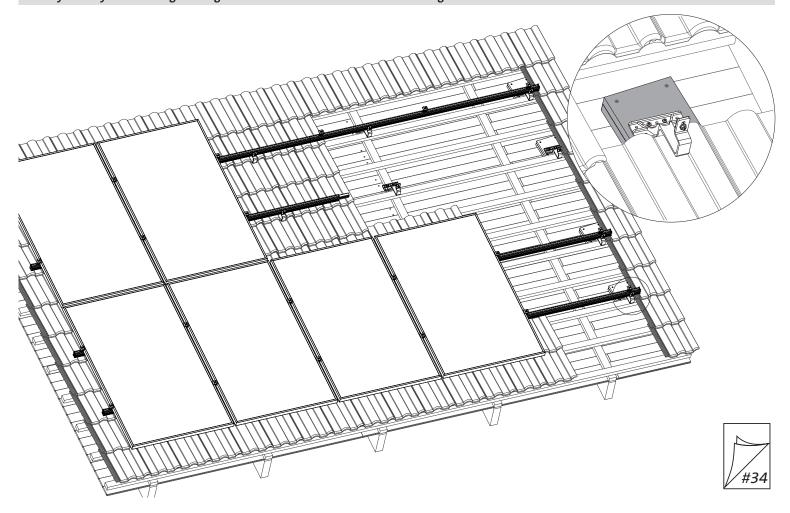


### **Connection to alternative fasteners**

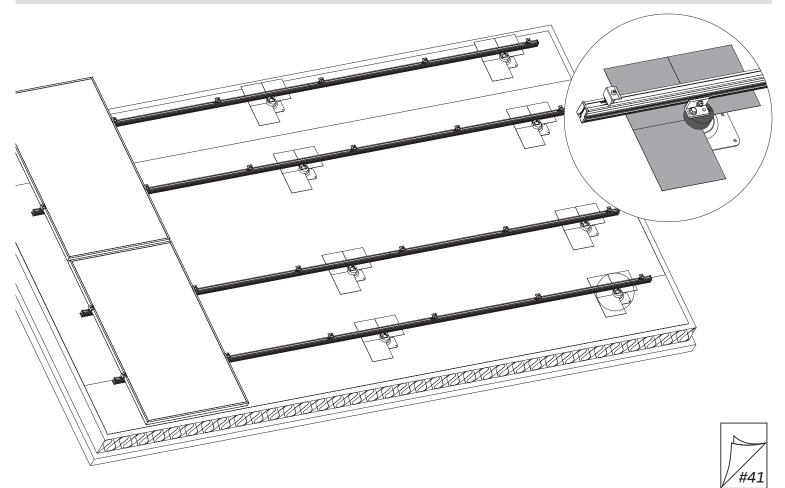

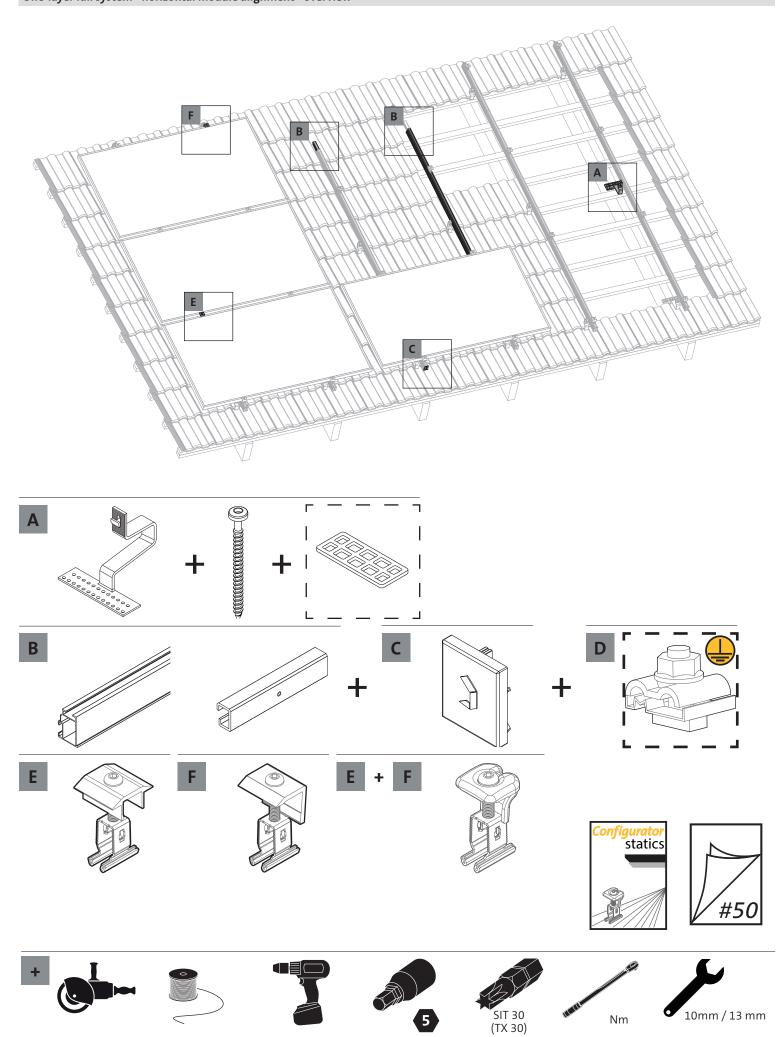


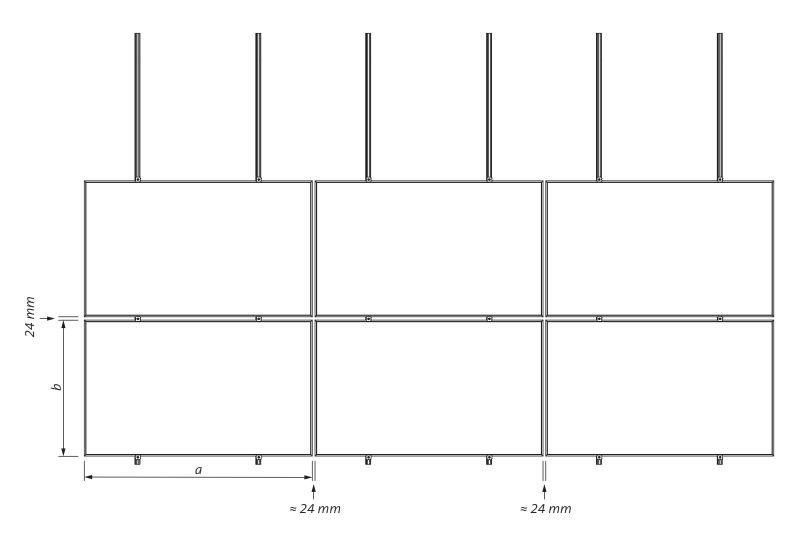


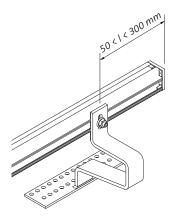





- General instructions
- Static calculations
- Technical project overview
  - ⇒ www.pv-configurator.com

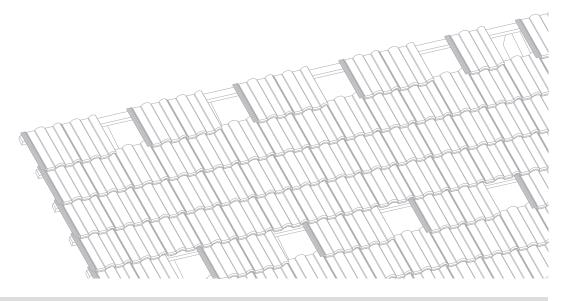

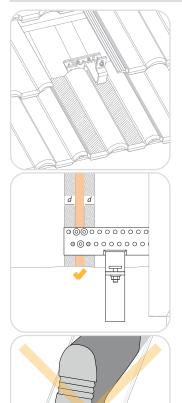

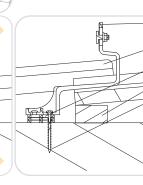

-Roof hooks -Roof tiles -Distance plate -Batten -Wood screw -Rafter

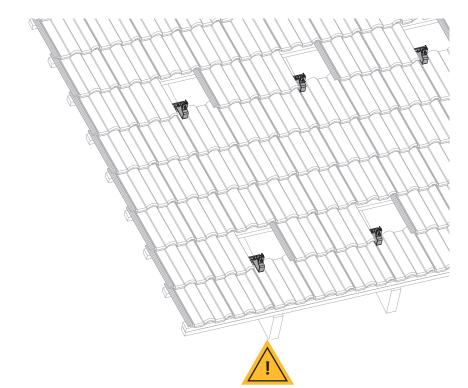


### Warning!

Use the hole pattern of the roof hook to place the roof hook in the trough area of the tile. Screw the roof hook in the allowed area only. Keep a distance of  $3x \emptyset$  of the wood screw to the outer edge of the rafter. Do not use the roof hook as step.

When mounted, the cantilever of the roof hook shall have a distance of approx. 5mm to the roof tile.

Please find the number of screws on *page* 51-54.

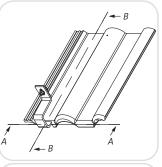






#### Warning

The following treatment of tiles only applies to grooved tiles. For flat tiles, please look at *page 46-48*.


Treat the tiles above the roof hooks using an angular grinding machine. Treat the tile as per detailed views A-A and B-B.

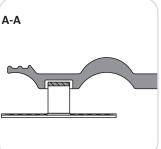

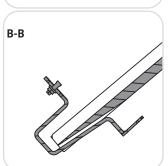


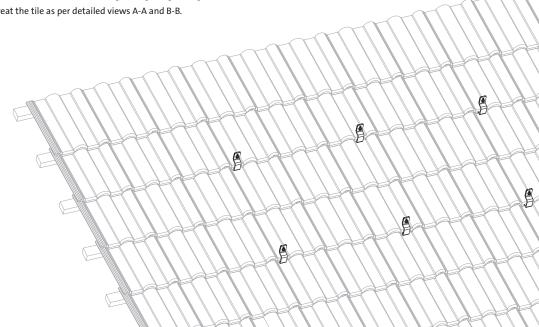




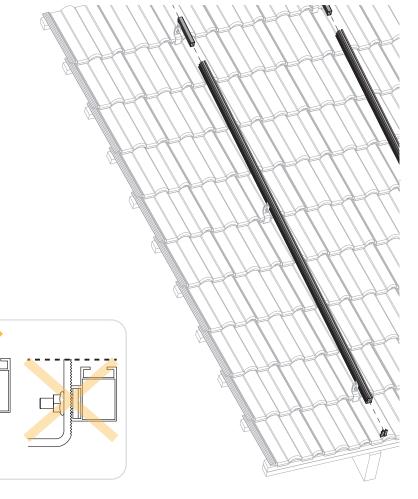




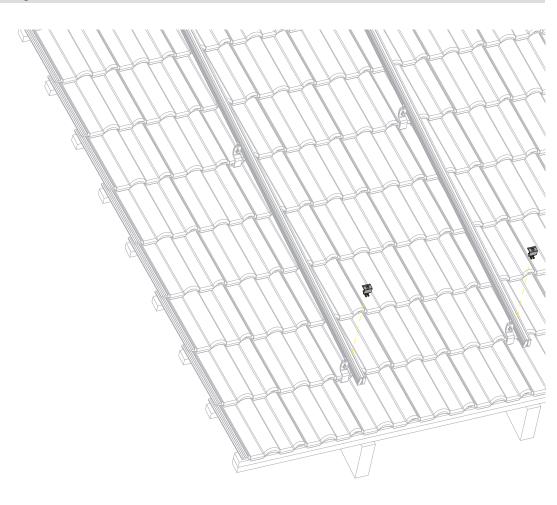





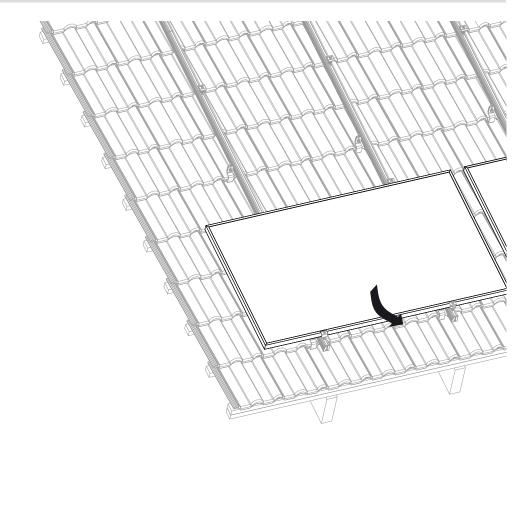




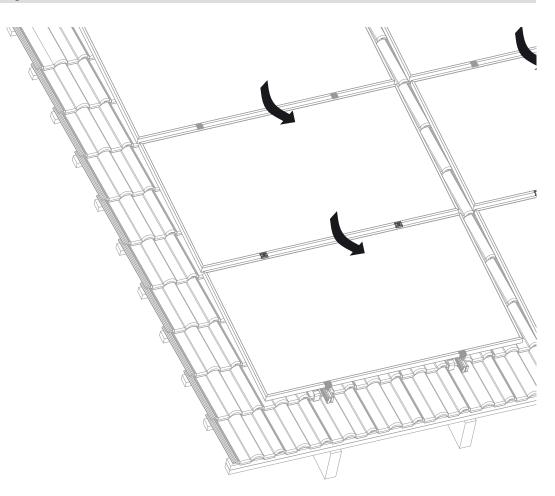

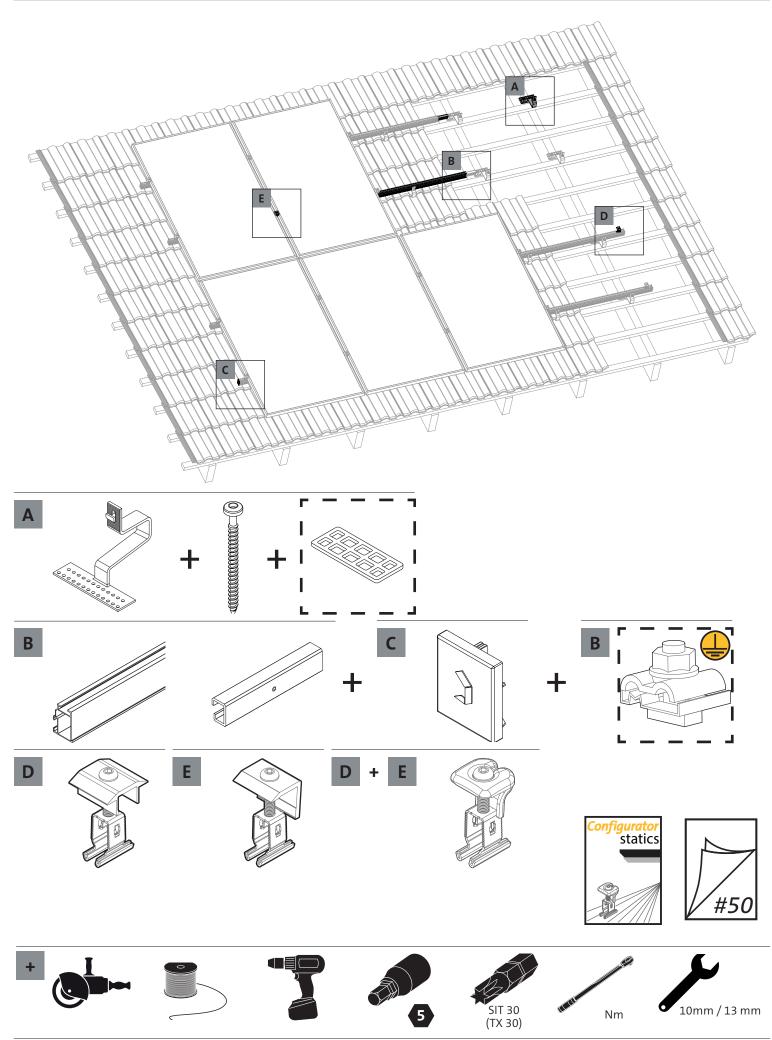


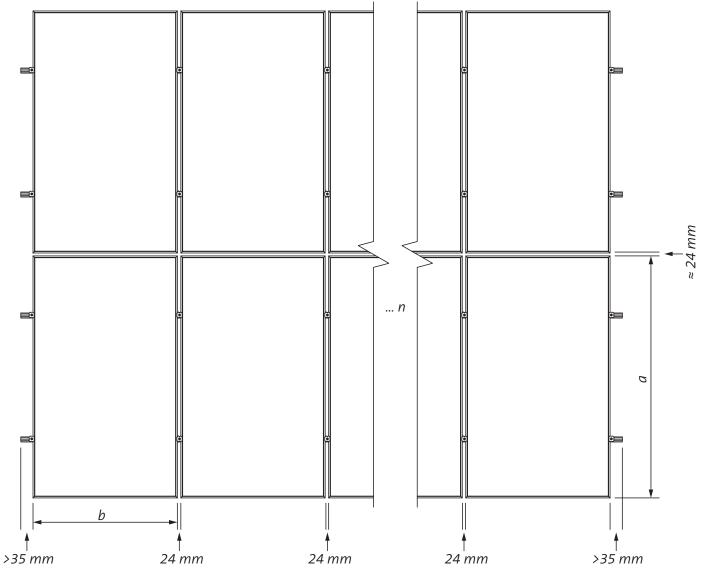


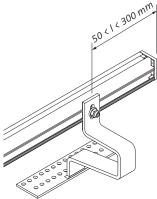




- **General instructions**
- Static calculations
- **Technical project overview** 
  - ⇒ www.pv-configurator.com

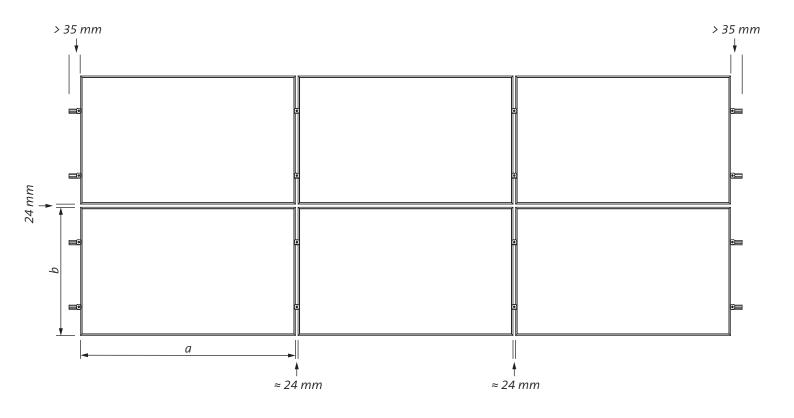


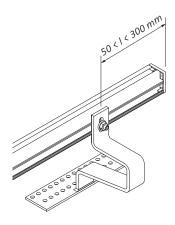





- General instructions
- Static calculations
- Technical project overview
  - ⇒ www.pv-configurator.com

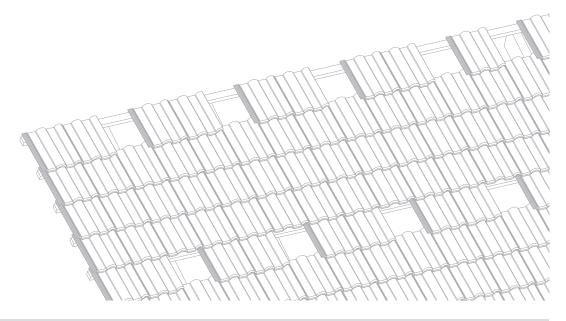

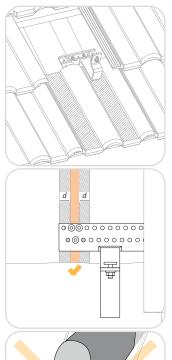




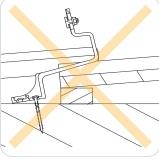

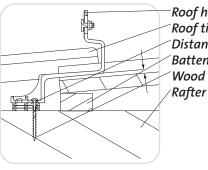

Roof hooks Roof tiles Distance plate Batten Wood screw

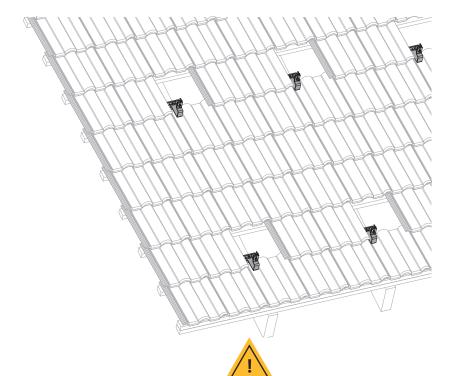


#### Warning!

Use the hole pattern of the roof hook to place the roof hook in the trough area of the tile. Screw the roof hook in the allowed area only. Keep a distance of  $3x \emptyset$  of the wood screw to the outer edge of the rafter. Do not use the roof hook as step.

When mounted, the cantilever of the roof hook shall have a distance of approx. 5mm to the roof tile.

Please find the number of screws on page 51-54.

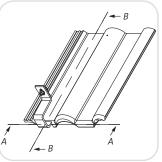






### Warning!

The following treatment of tiles only applies to grooved tiles. For flat tiles, please look at *page 46-48*.


Treat the tiles above the roof hooks using an angular grinding

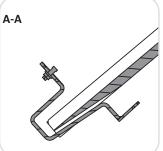


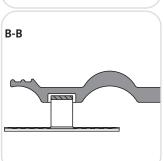


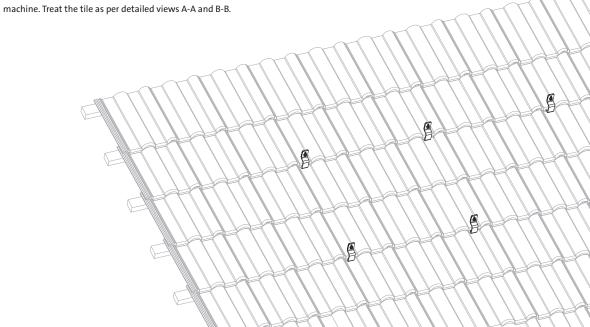


## One-layer rail system - vertical module alignment

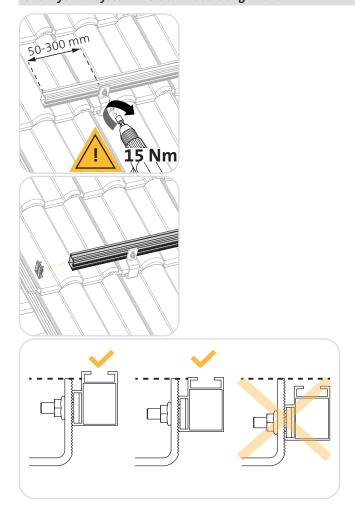

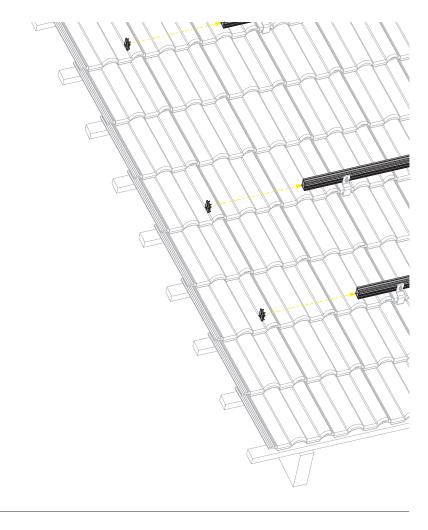


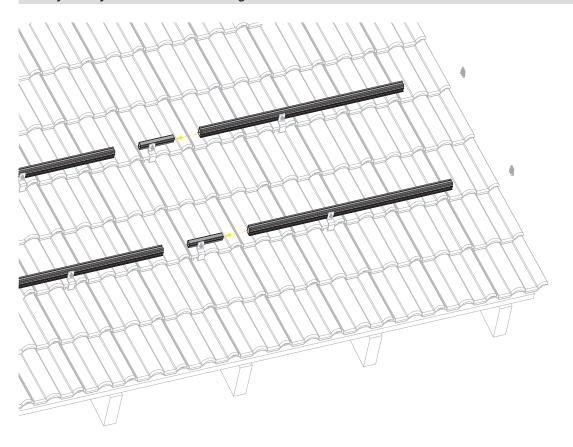


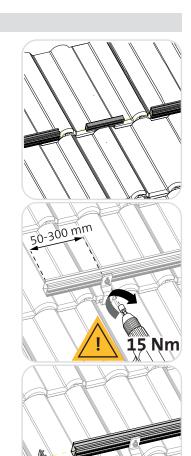

# One-layer rail system - vertical module alignment



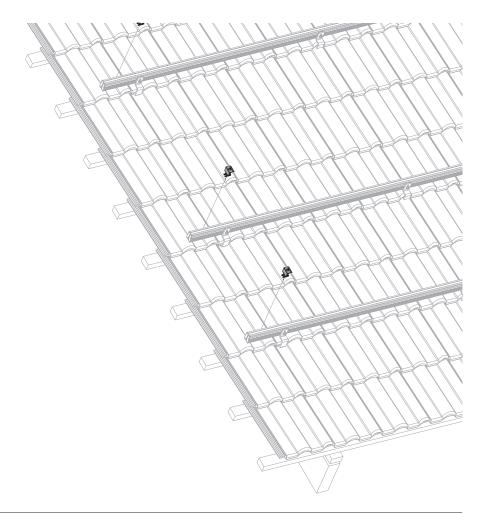

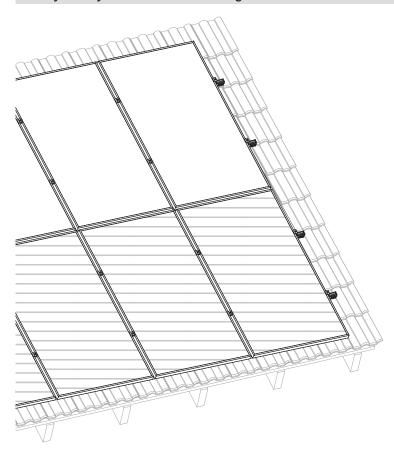




### Warning!


Before installing the modules, the modules of the lowest row should be provided with anti-slip protection.


For this purpose fasten the M6x20 mm screws (with the shaft/thread pointing downwards) in the fastening points of the modules using M6 nuts. Place the modules in the lowest row in a way that the anti-slip protection abuts and the edge of the lowest mounting rail (Fig. B) touches.


Note: The anti-slip protection can only be used with modules with the appropriate fastening holes.

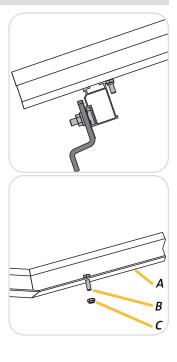



## One-layer rail system - vertical module alignment

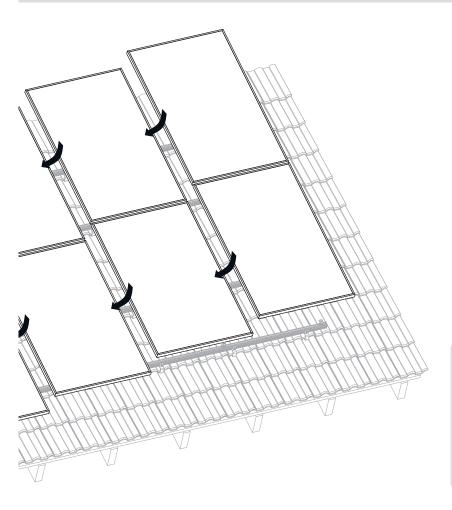

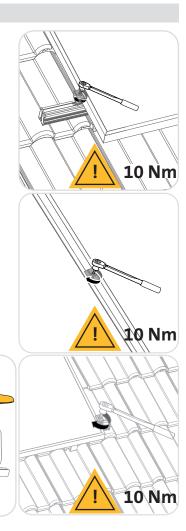

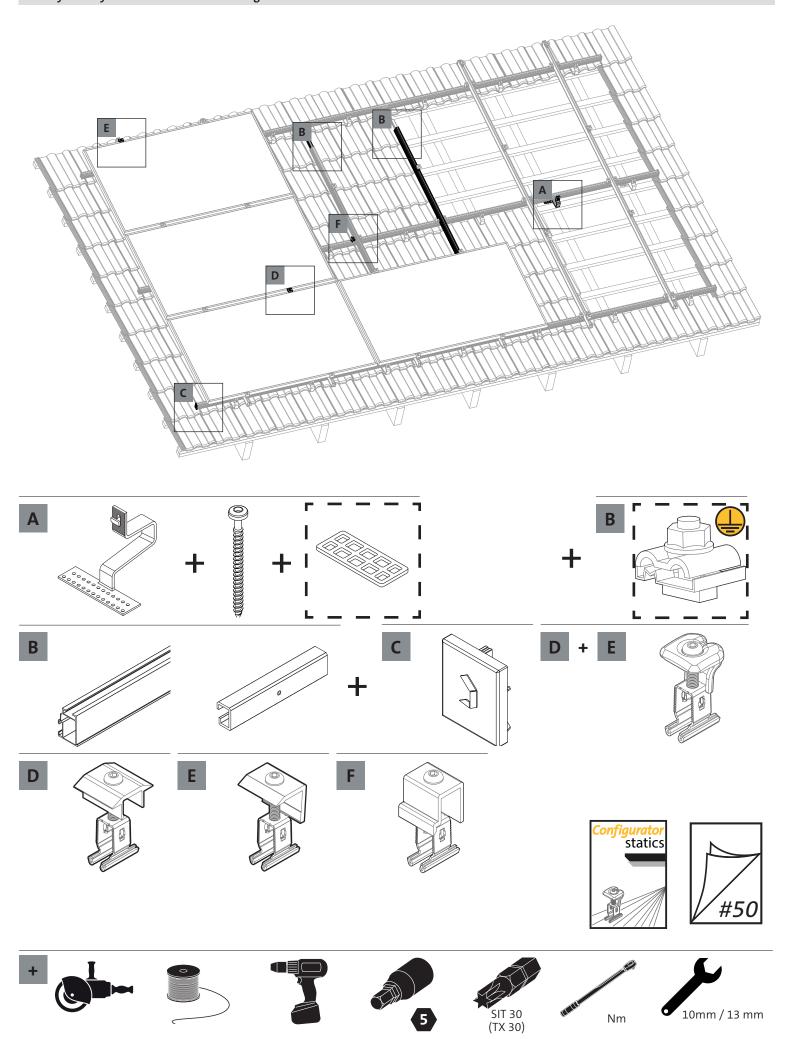


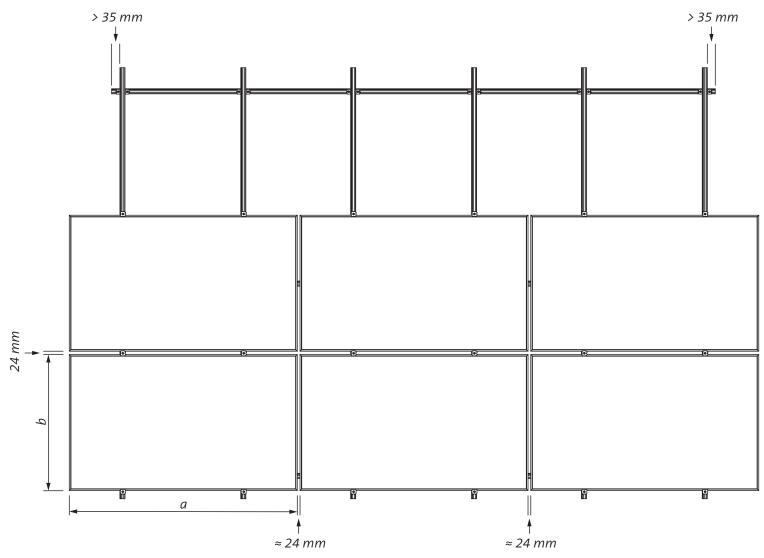


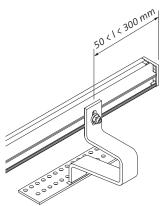






- General instructions
- Static calculations
- Technical project overview
  - ⇒ www.pv-configurator.com

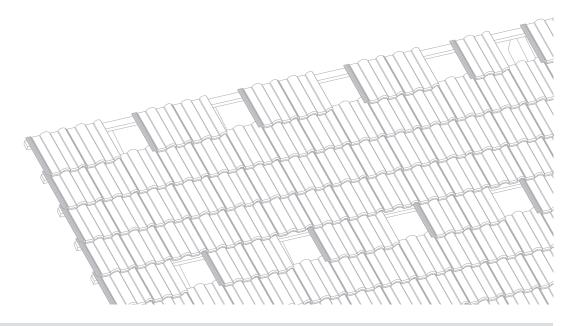


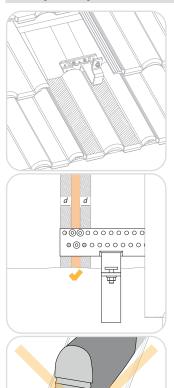

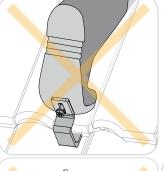

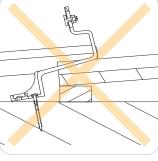

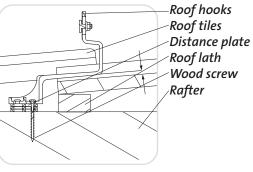

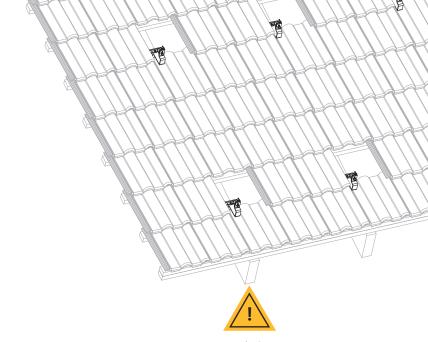


#### Warning!

Use the hole pattern of the roof hook to place the roof hook in the trough area of the tile. Screw the roof hook in the allowed area only. Keep a distance of  $3x \emptyset$  of the wood screw to the outer edge of the rafter. Do not use the roof hook as step.

When mounted, the cantilever of the roof hook shall have a distance of approx. 5mm to the roof tile.

Please find the number of screws on page 51-54.

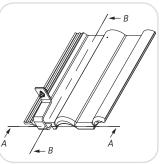






### Warning!


The following treatment of tiles only applies to grooved tiles. For flat tiles, please look at page 46-48.


Treat the tiles above the roof hooks using an angular grinding

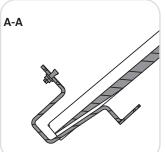


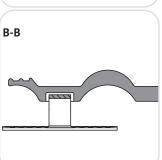


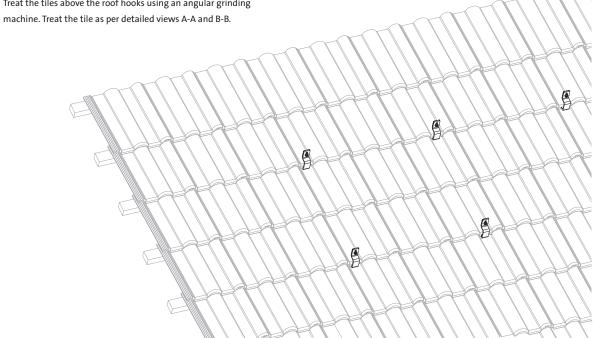


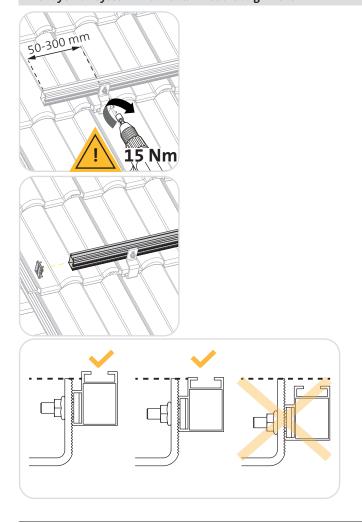

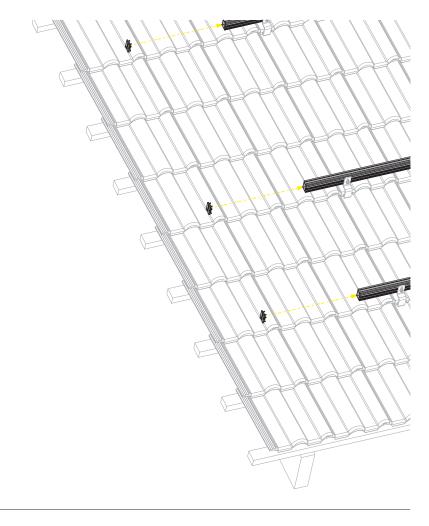


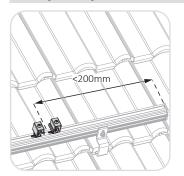


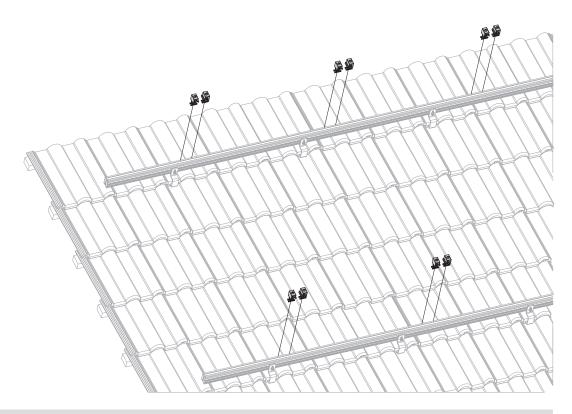


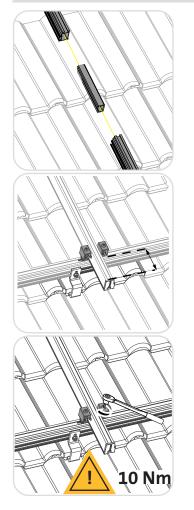





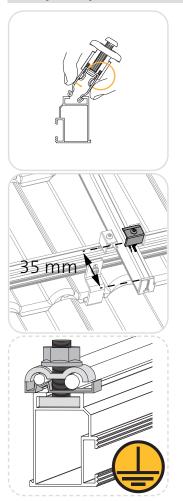


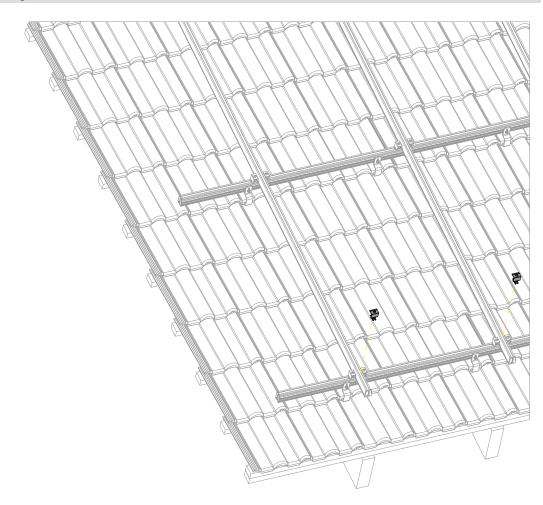


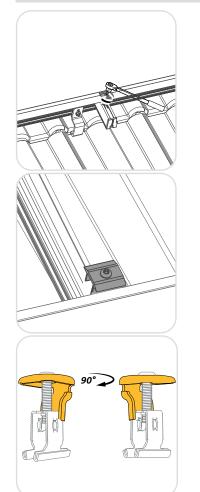


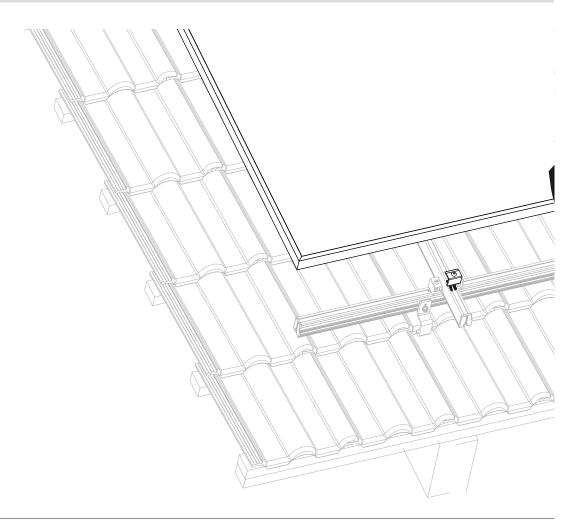


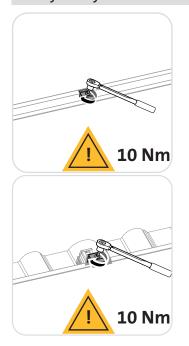

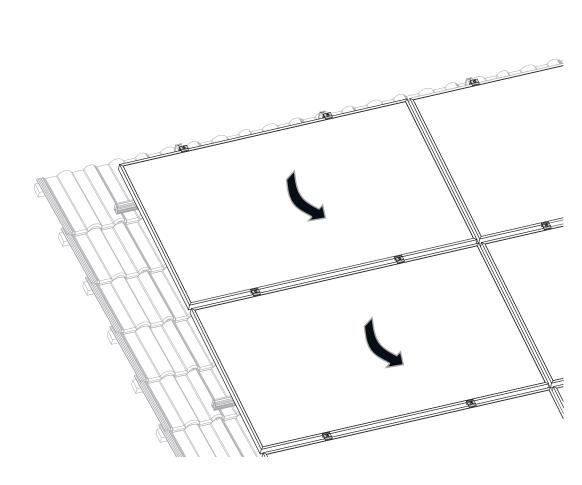

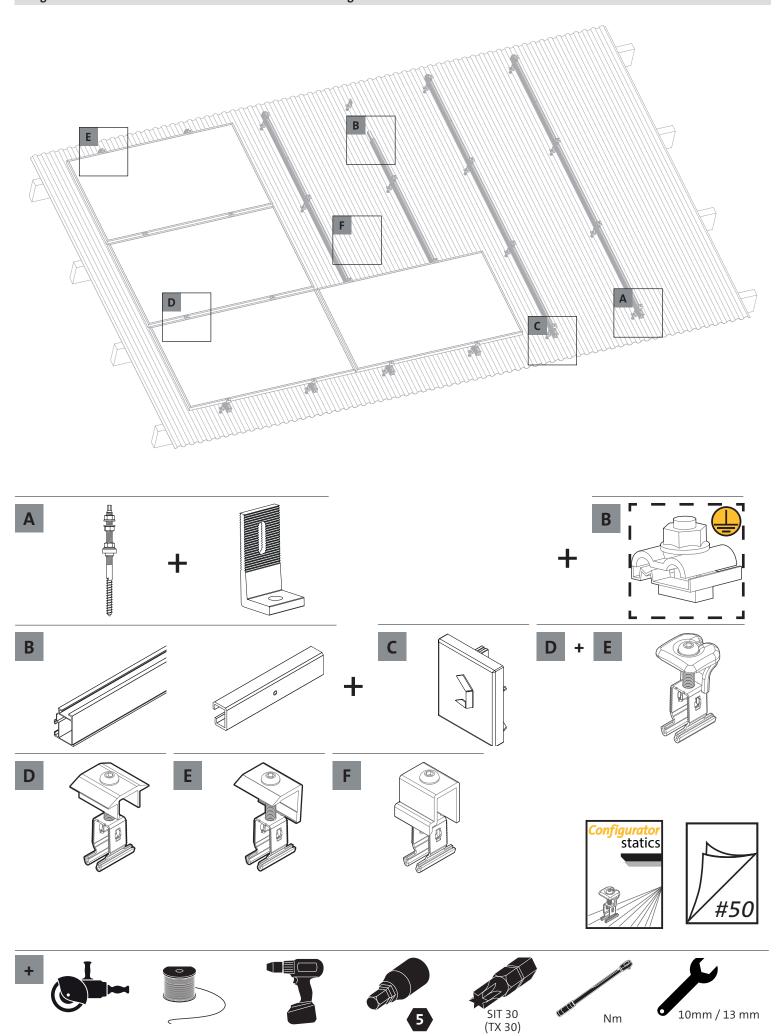

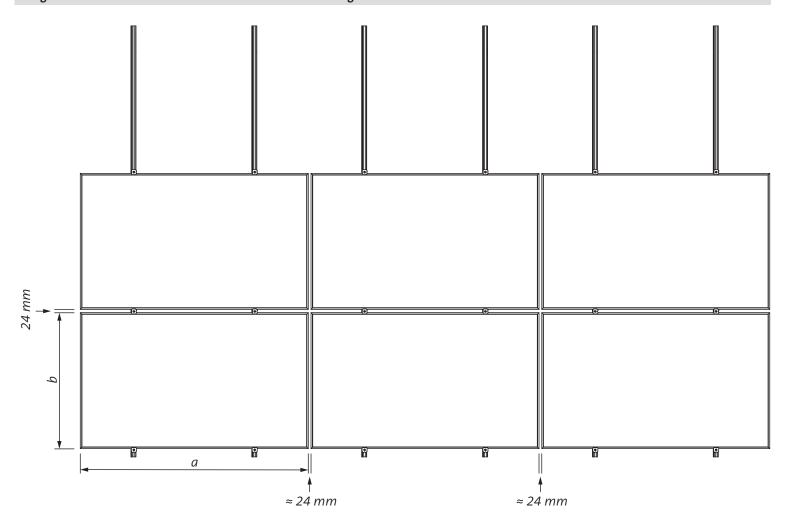


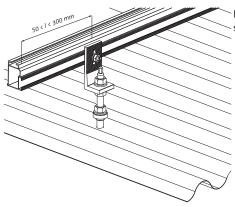





- **General instructions**
- **Static calculations**
- **Technical project overview** 
  - ⇒ www.pv-configurator.com


## Hanger bolts - solar fastener connection - horizontal module alignment

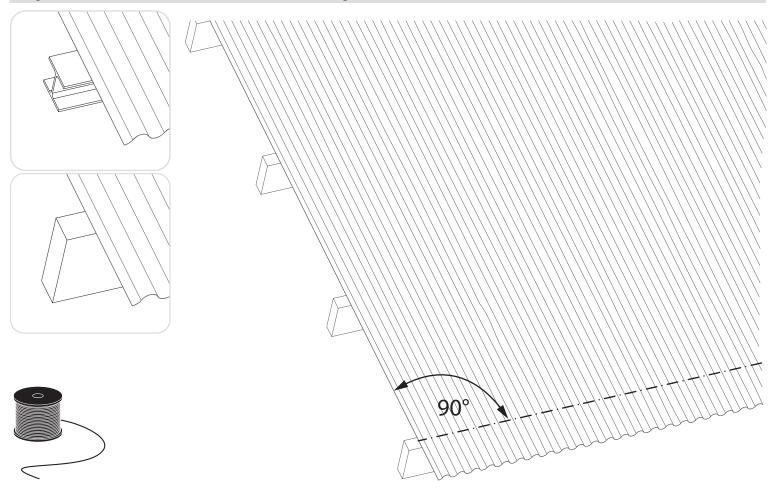



## Hanger bolts - solar fastener connection - horizontal module alignment

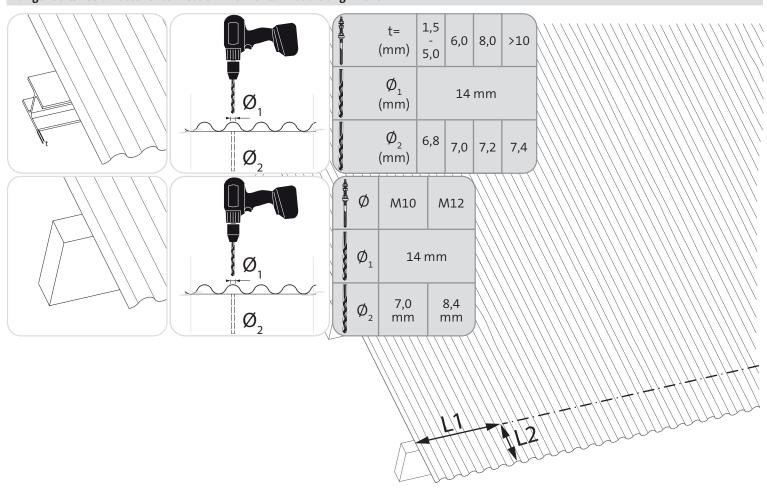

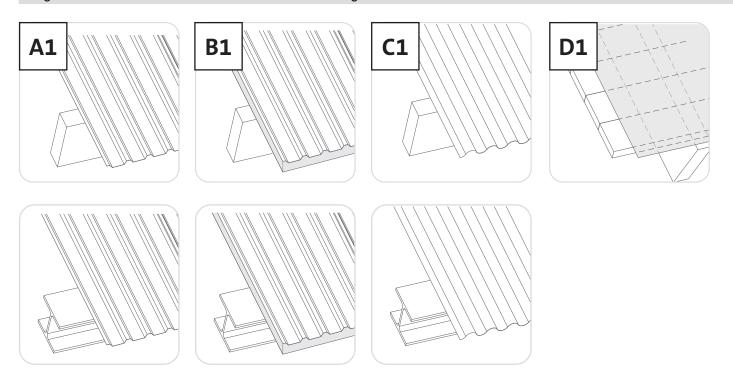


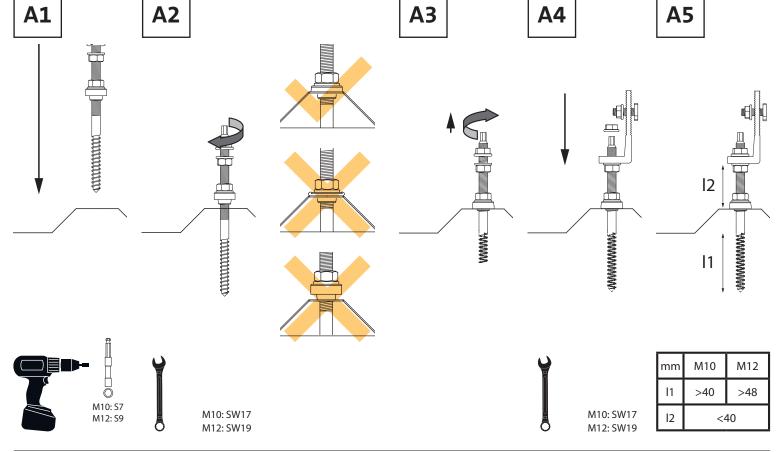

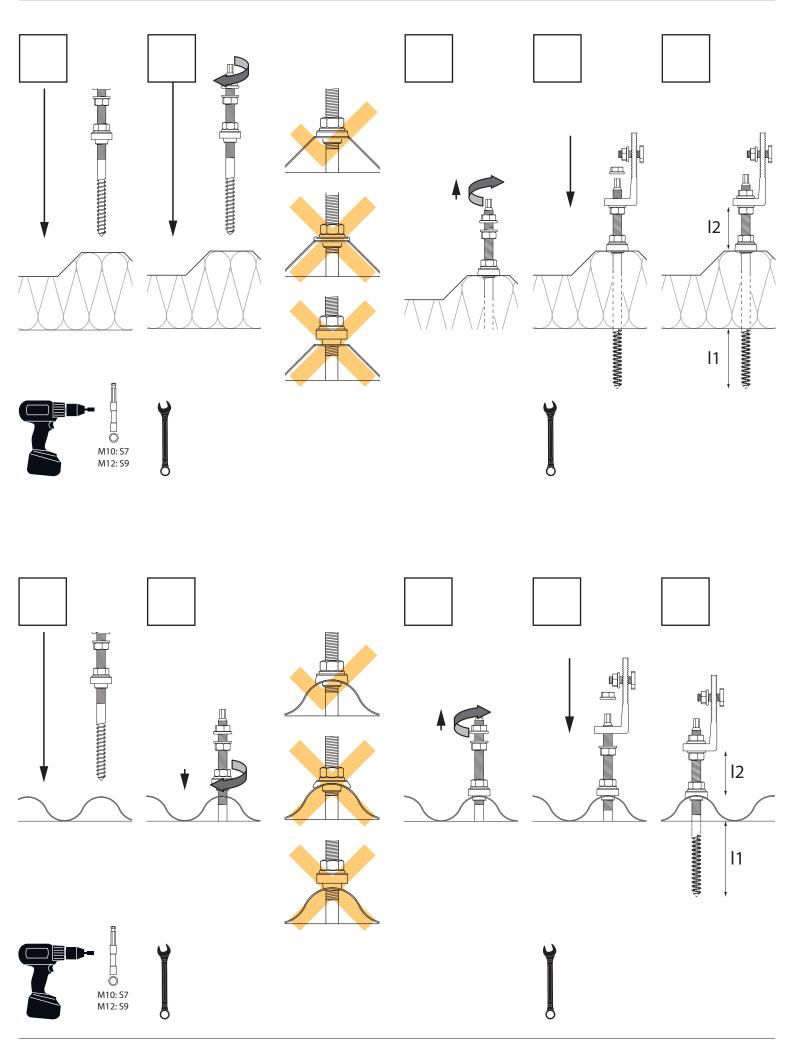


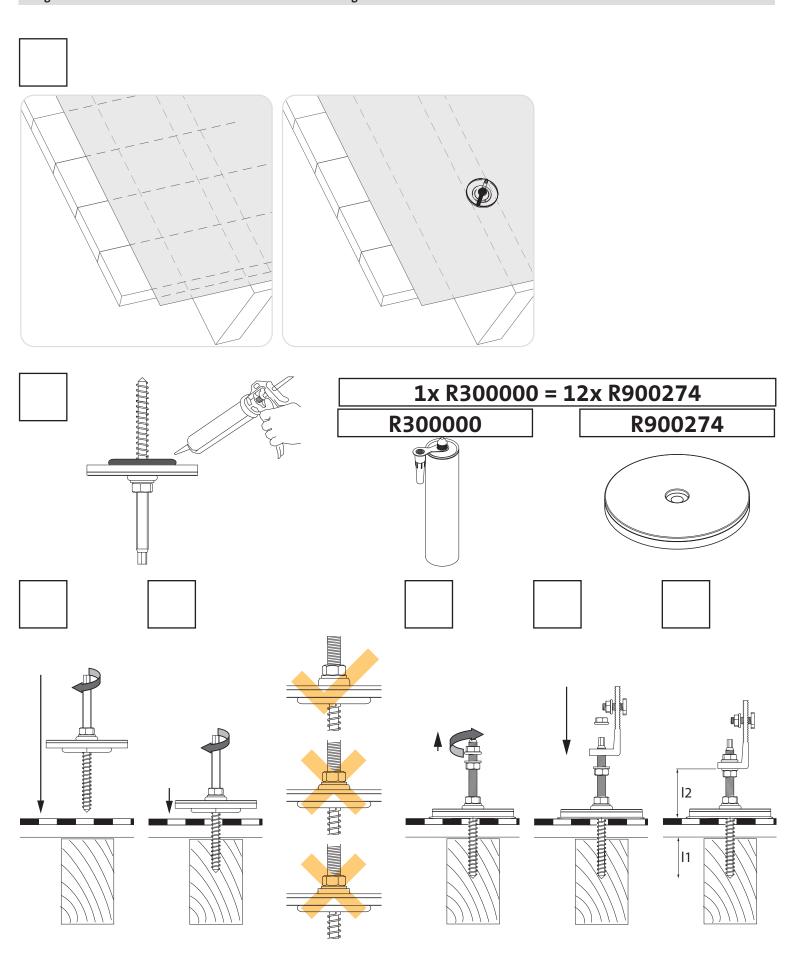


## Hanger bolts - solar fastener connection - horizontal module alignment

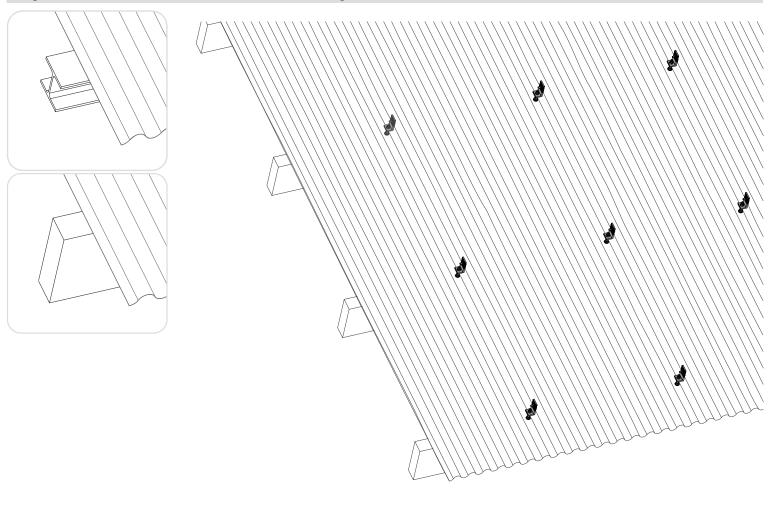


Hanger bolts - solar fastener connection - horizontal module alignment

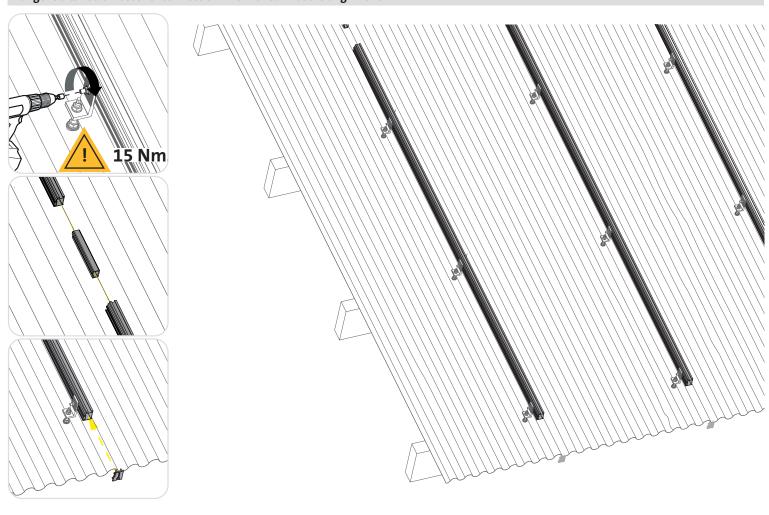



## Hanger bolts - solar fastener connection - horizontal module alignment

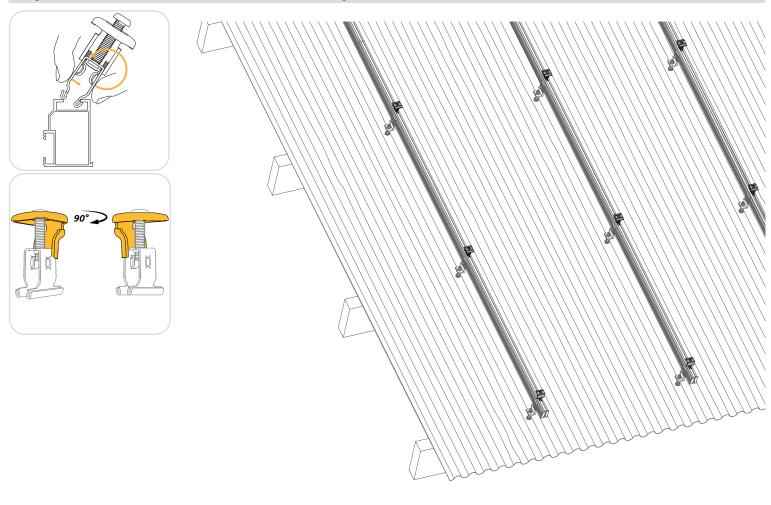


# Hanger bolts - solar fastener connection - horizontal module alignment

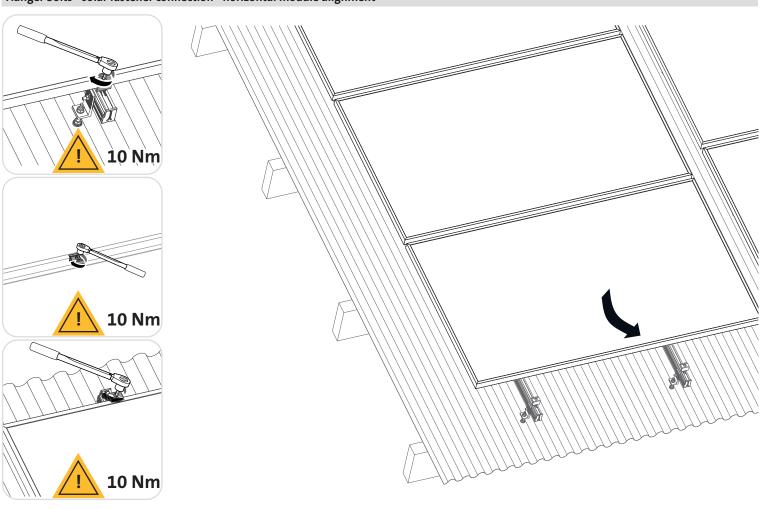

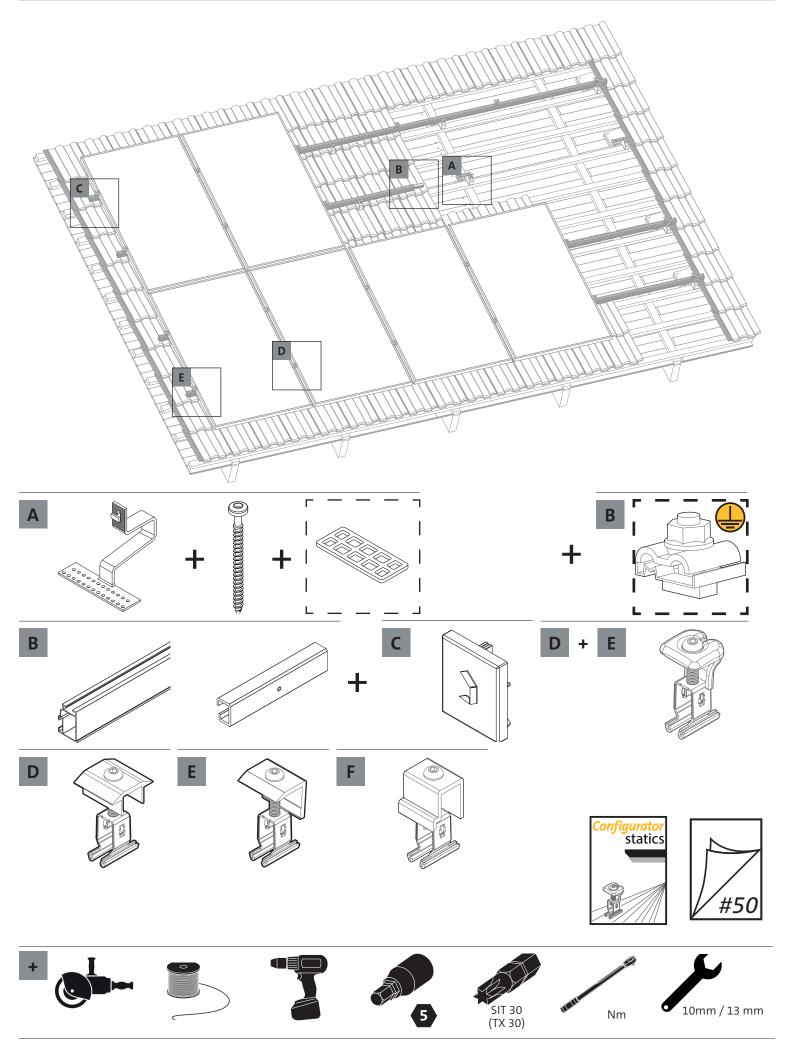

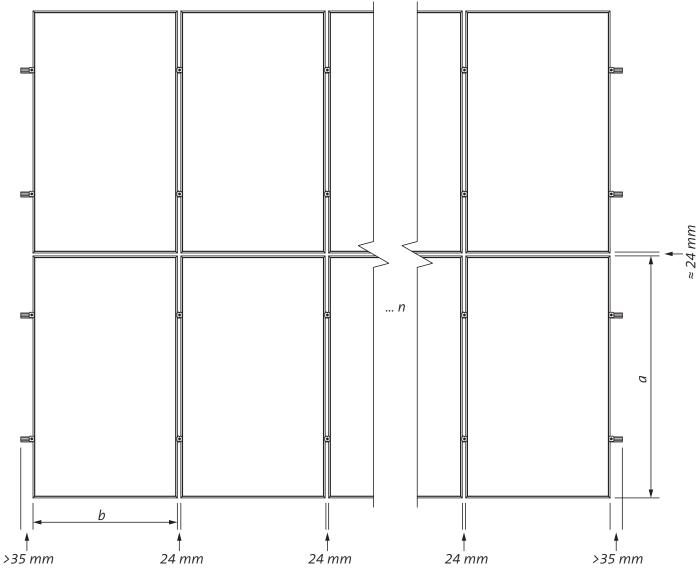

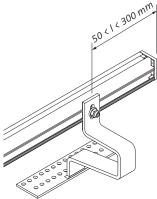




- General instructions
- Static calculations
- Technical project overview
  - ⇒ www.pv-configurator.com


## One-layer rail system on tongue and groove boards fixation - vertical module alignment

Remove the additional gutter tiles on the top side as per layout to have more work space.

#### Warning!


Check the condition of the roof construction before starting the installation. This includes quality and thickness of rafters, purlins and the roof sealing. The building structure must be able to safely and durably bear the additional loads of the photovoltaic system.

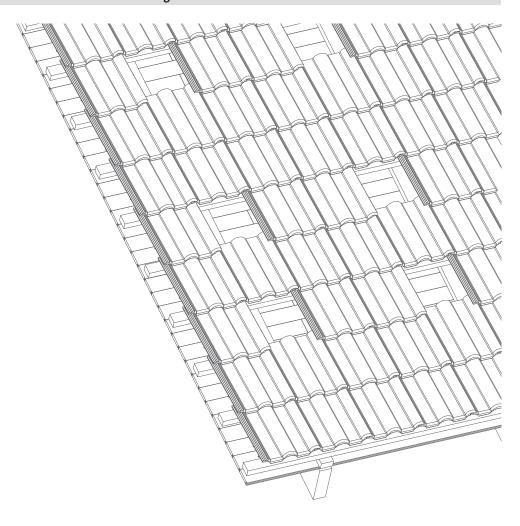

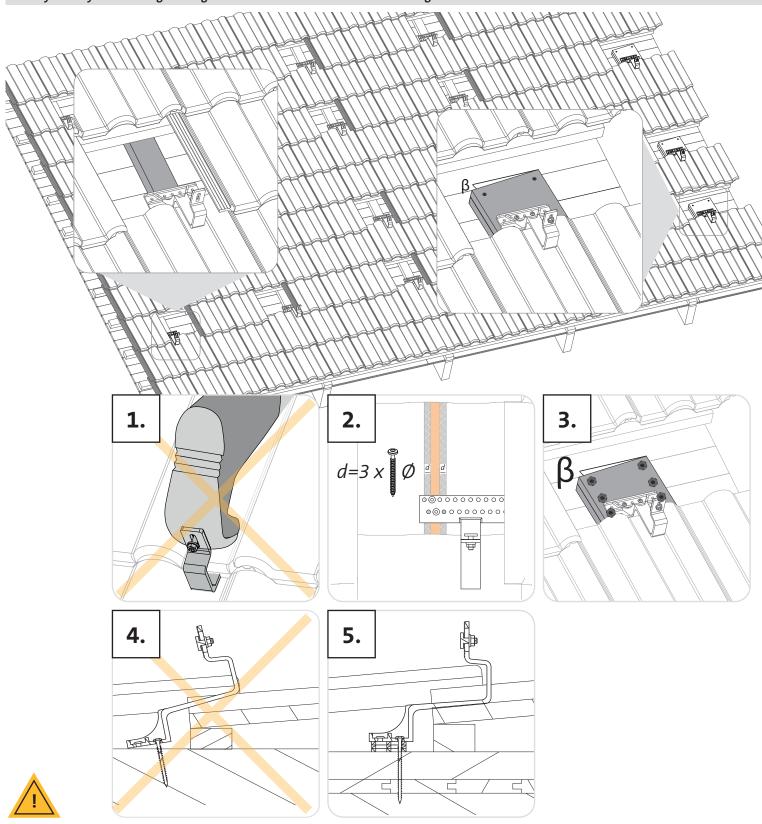

## Warning!


- 1. Do not use the roof hook as step
- 2. Only screw the roof hooks attached to the rafters within the permissible range. Keep a distance of 3x Ø wood screws to the outer edge. The quantity of screws can be found in the annex.
- 3. avoid the possibility of standing water by twisting or beveling the levelling element at an angle of approx. S≈5°. We recommend screwing the levelling element with 2 screws each to at least 3 boards to ensure an even load transfer to the substructure.
- 4. Ensure that the roof hook does not rest on the tile.
- 5. The roof hook should be screwed through all levelling elements into the boards.

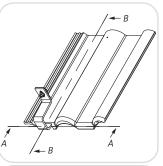





The following treatment of tiles only applies to grooved tiles. For flat tiles, please look at page 46-48.


Treat the tiles above the roof hooks using an angular grinding

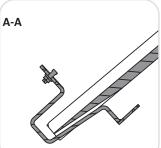


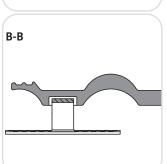


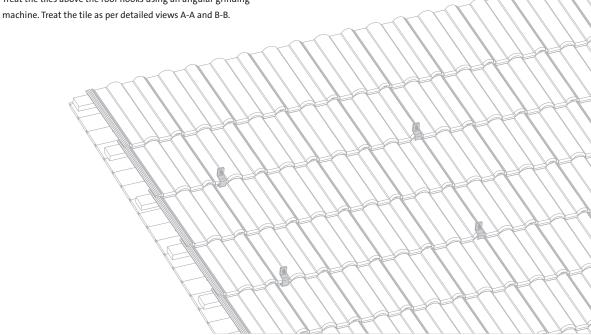

### One-layer rail system on tongue and groove boards fixation - vertical module alignment

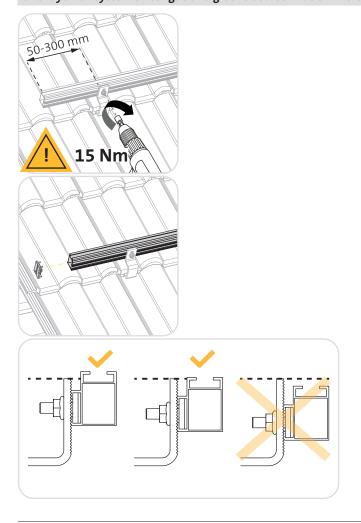


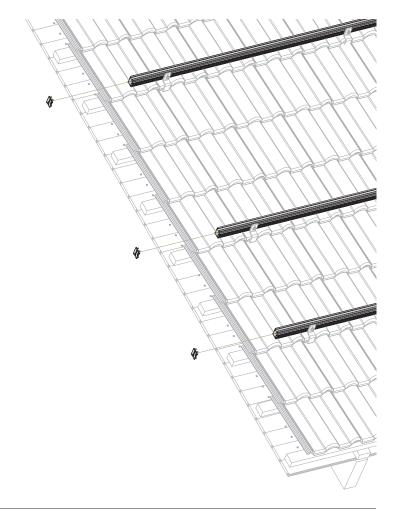


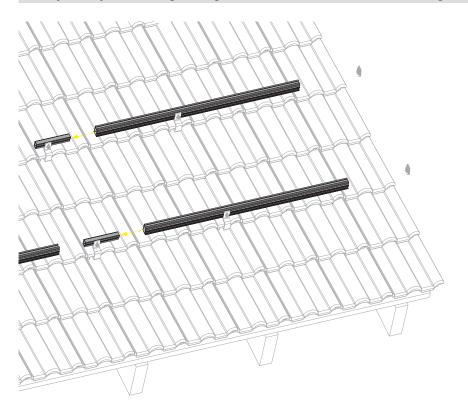




## One-layer rail system on tongue and groove boards fixation - vertical module alignment

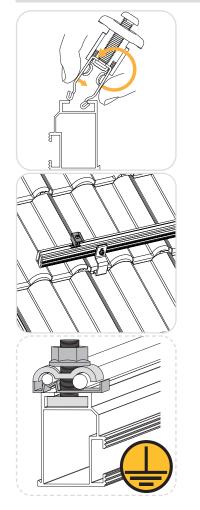

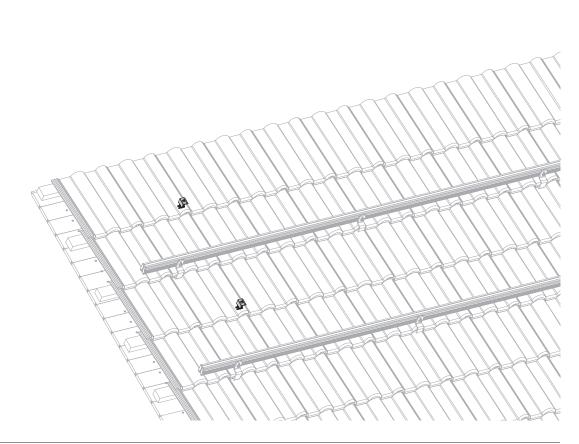

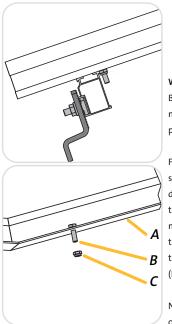




#### Warning!


Before installing the modules, the modules of the lowest row should be provided with anti-slip protection.


For this purpose fasten the M6x20 mm screws (with the shaft/thread pointing downwards) in the fastening points of the modules using M6 nuts. Place the modules in the lowest row in a way that the anti-slip protection abuts and the edge of the lowest mounting rail (Fig. B) touches.


Note: The anti-slip protection can only be used with modules with the appropriate fastening holes.

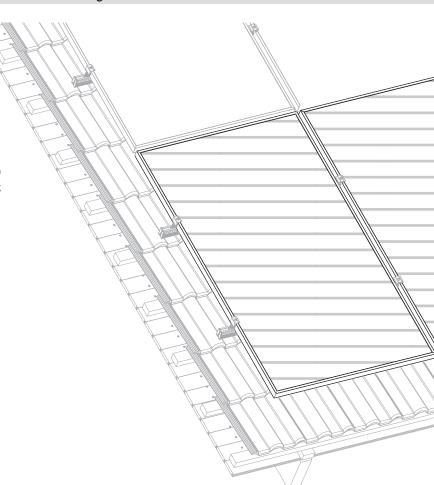



#### One-layer rail system on tongue and groove boards fixation - vertical module alignment

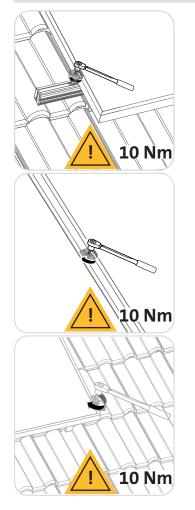

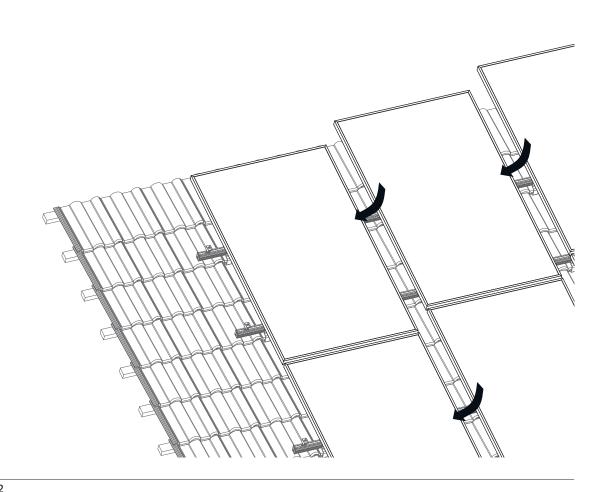

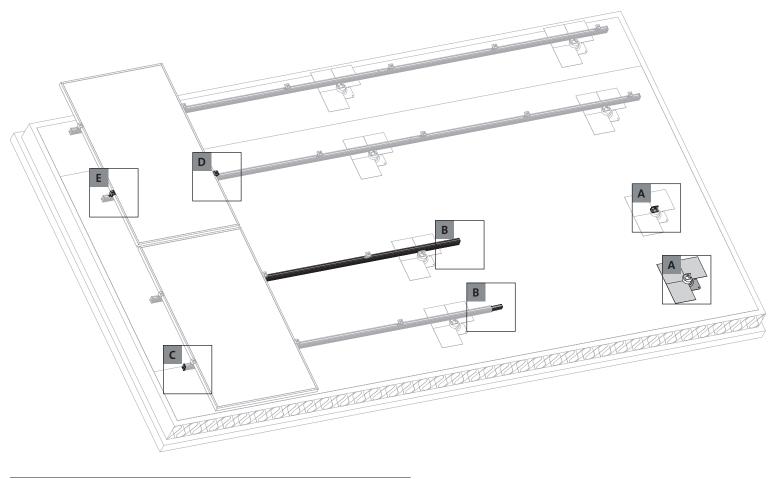


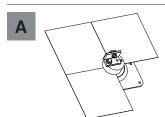

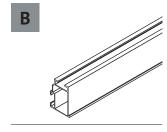



D




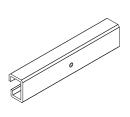




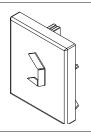

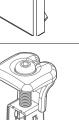

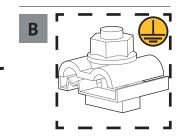

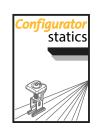



















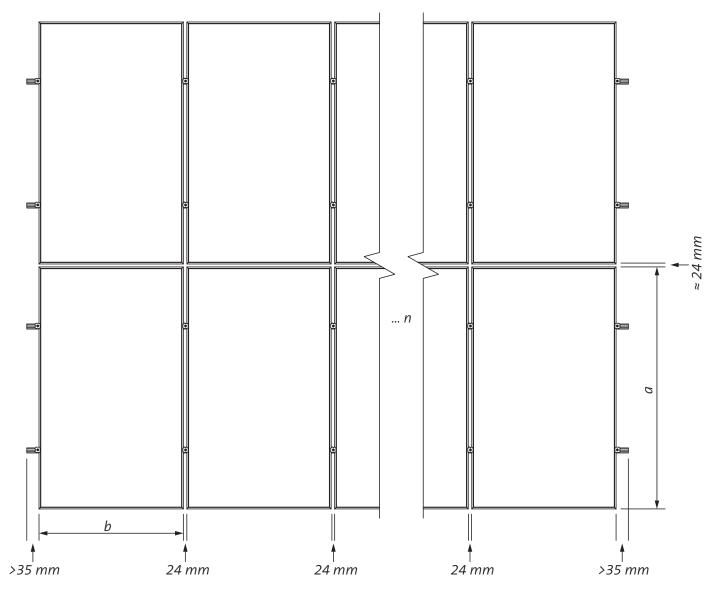


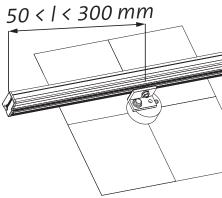


Without a structural analysis by means of the Renusol Configurator the length of the cantilever should not be longer than 300 mm.



- General instructions
- Static calculations
- Technical project overview
  - ⇒ www.pv-configurator.com

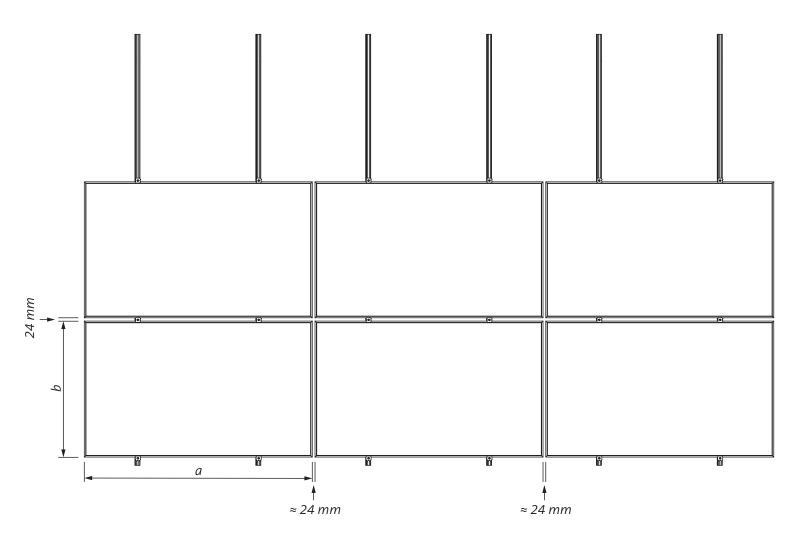

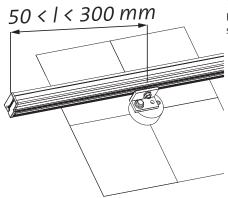


Without a structural analysis by means of the Renusol Configurator the length of the cantilever should not be longer than 300 mm.



- **General instructions**
- Static calculations
- **Technical project overview** 
  - ⇒ www.pv-configurator.com


#### **Connection to alternative fasteners**

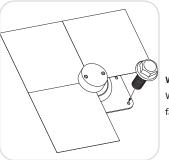




#### Warning!

With this, observe the installation guide issued by the manufacturer of your alternative fastening.

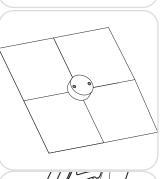




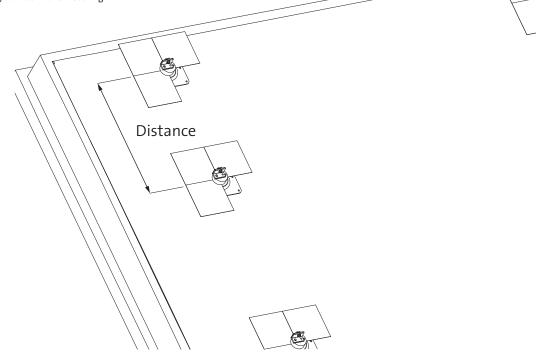


#### **Connection to alternative fasteners**







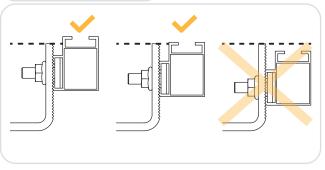

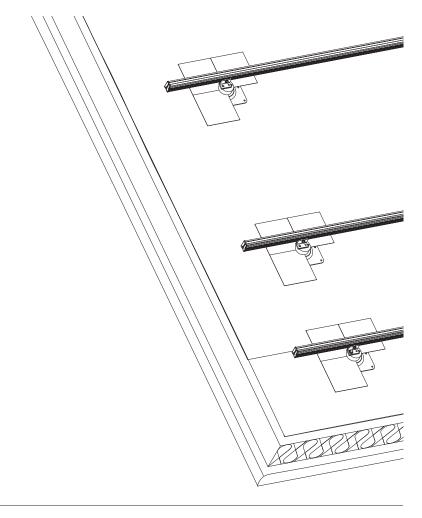



### **Connection to alternative fasteners**

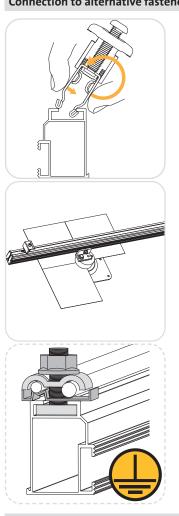

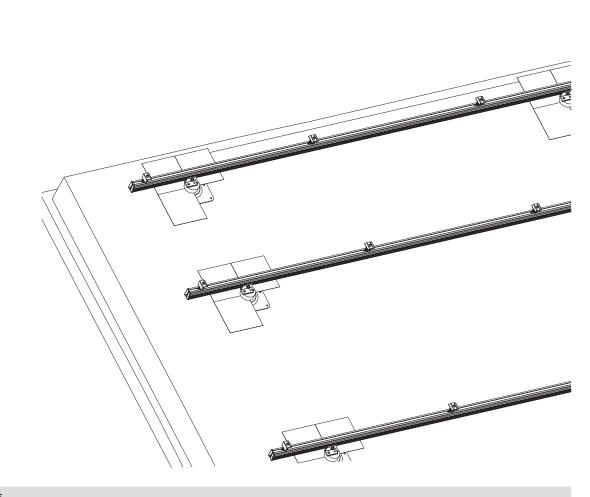


### **Connection to alternative fasteners**

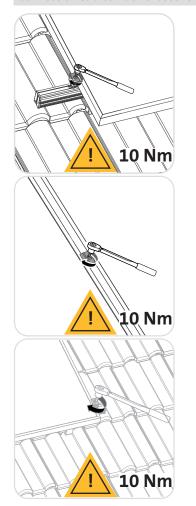

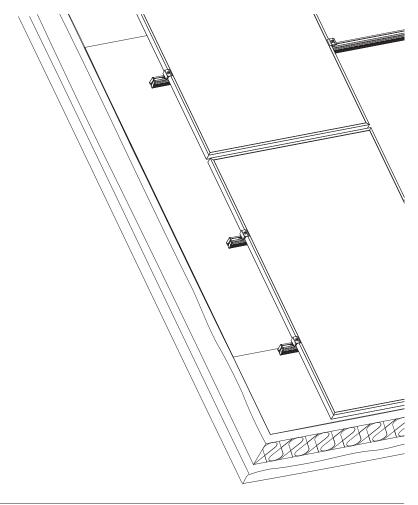

### Annex - flat tile with genius roof solution

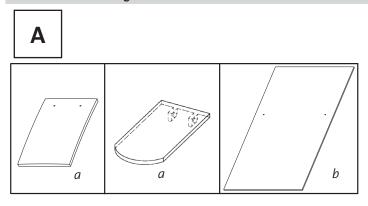



- a Plain Tile
- b Slate Tile


#### Processing of the bricks


Use an angle grinder or slate cutter to cut a recess in the tile at the point of insertion of the roof hook, which covers the roof hook so that the tile lies flat. If the roof tiles are grooved, a recess must also be cut in the top of the lower roof tile. Handling from three different positions:



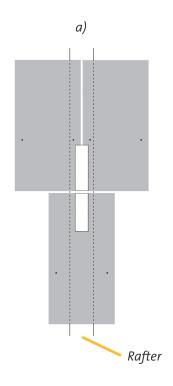

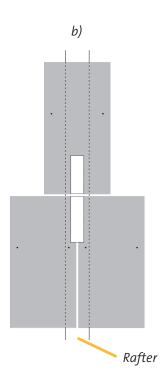

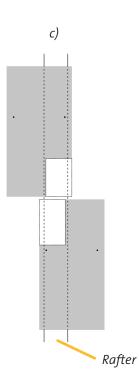


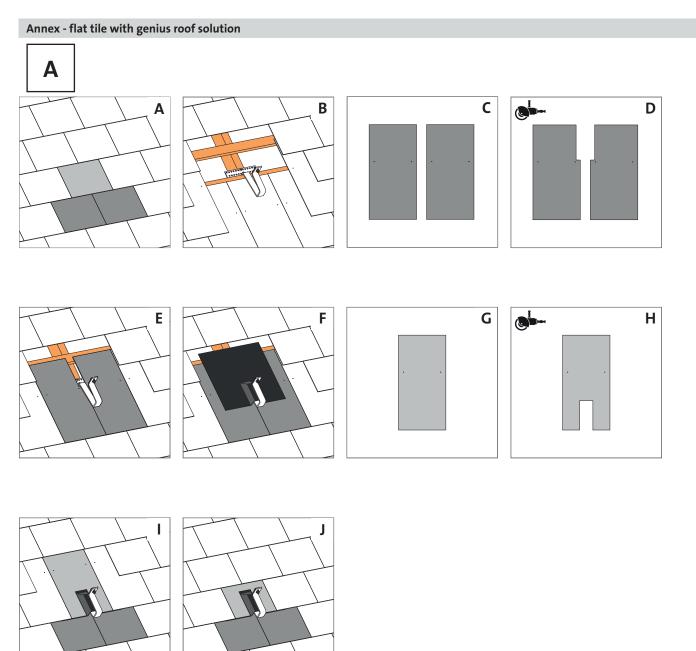






## Annex - flat tile with Genius roof solution




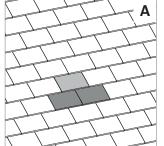


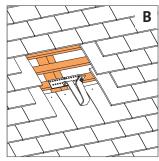


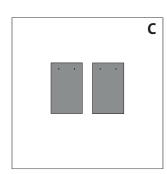


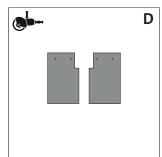

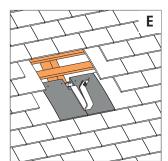

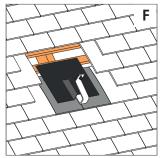

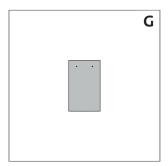

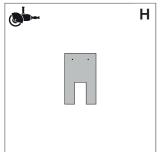



















## Annex - flat tile with seal sheet




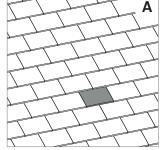


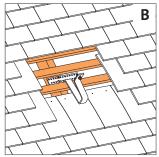

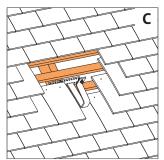


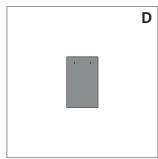


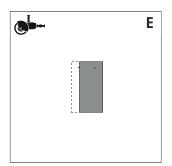


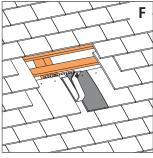



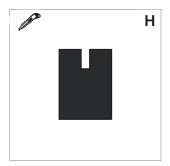

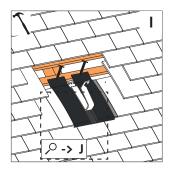

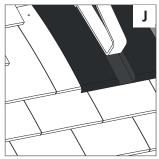





+













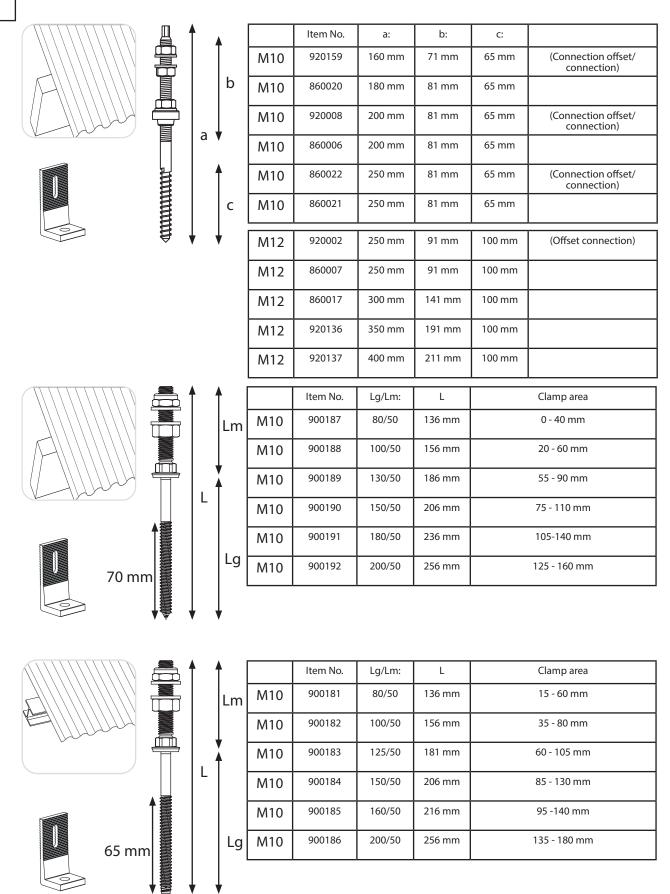


#### Appendix - Roof hooks and screws for wooden substructures



R420182 UK Roof hook,

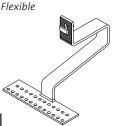

R420180 UK Roof hook, Pantile

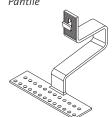


R420181 UK Roof hook, Plain



R420184 UK Roof hook, Plain, Heavy Load



R420183 UK Roof hook 90°,

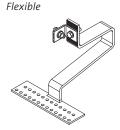

R420151 Roof hook, aluminium, adjustable




R420161 Roof hook, aluminium, adjustable




R920003 Roof hook, aluminium, 90°




R420170 Roof hook,

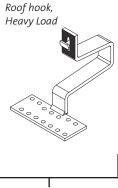

R420150 Roof hooks, On-roof insulation

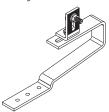

R420165 Roof hook, Eco Basic

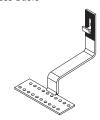

R420158 Roof hook, Stainless steel TP



Galvanised steel as per EN ISO 1461. Suitable for corrosion class C3.


R420153 Plain tile roof hook




R420154 Plain tile roof hook, 90°



R420172 Roof hook, RH flat

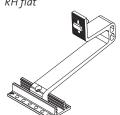

R420171 Roof hook, RH1

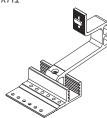

R420155 Slate roof hook



R420150 Dachhaken, Edelstahl




R900050 5x30



R900305 6 x 80



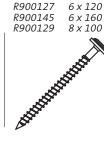


R900013








R420171 Roof hook, RH1



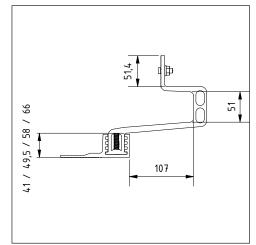

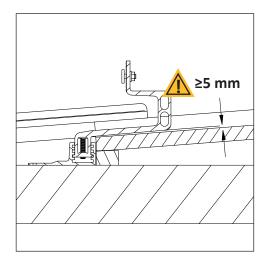

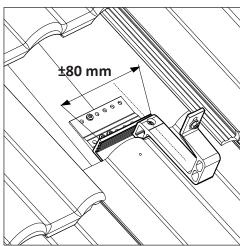


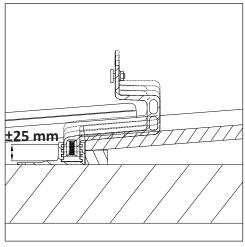






R420172 Roof hook, RH1 flat




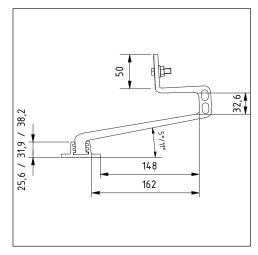


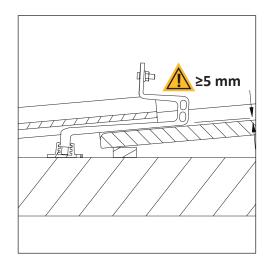


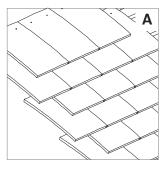


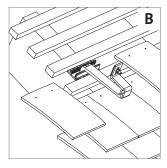


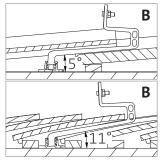

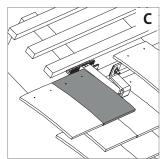


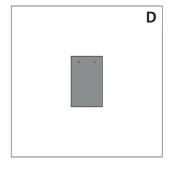

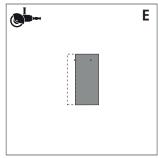

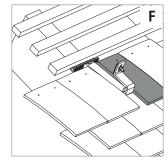




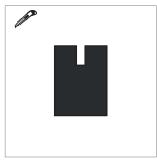





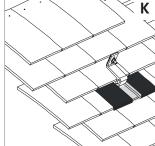

2x

2x

3x

3x

2x

2x

2x

2x

2x

В

420153

420154

420155

420158

420160

420165

420180

420181

420182

420183

1 X F	Roof hooks  Crochet de toit  Staffa		<b>+</b> n	D Holzschran  UK Wood scre  F Vis a bois  I Vite da leg  E Tornillo de	gno	
	900318	900013	900129	900127	900145	900050
420171	3x	-	_	2x	2x	_
420172	2x	_	_	2x	2x	-
420151	3x	_	_	2x	2x	_
420161	3x	_	-	2x	2x	-
420150	3x	_	_	2x	2x	_

2x

2x

2x

2x


2x


2x

3x





VS+ mounting rail 41 x 35

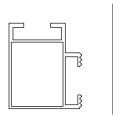

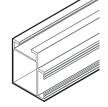


VS+ mounting rail 50 x 37

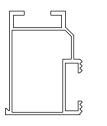

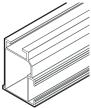



VS+ mounting rail 60 x 38

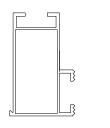





VS+ rail connector 41 x 35 - R400531

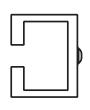

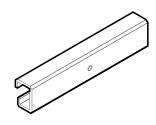



VS+ rail connector 50 x 37 - R400532

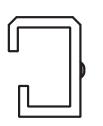

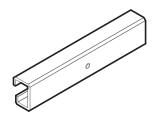

VS+ rail connector 60 x 38 - R400533

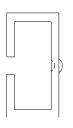

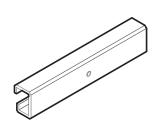


Cover cap for mounting rail 41 x 35



Item number	Colour
R900245	Black
R900246	Blank

Cover cap for mounting rail 50 x 37

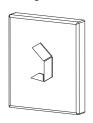

Item number	Colour
R920043	Black
R920044	Blank

# Mounting rail

Item number	Length	Colour
R400523	41x35x <b>2250</b> mm	Blank
R400523-B	41x35x <b>2250</b> mm	Black
R400524	41x35x <b>3300</b> mm	Blank
R400524-B	41x35x <b>3300</b> mm	Black
R400525	41x35x <b>4400</b> mm	Blank
R400525-B	41x35x <b>4400</b> mm	Black
R400513	41x35x <b>6200</b> mm	Blank

Item number	Length	Colour
R400527	50x37x <b>2250</b> mm	Blank
R400527-B	50x37x <b>2250</b> mm	Black
R400528	50x37x <b>3300</b> mm	Blank
R400528-B	50x37x <b>3300</b> mm	Black
R400529	50x37x <b>4400</b> mm	Blank
R400529-B	50x37x <b>4400</b> mm	Black
R400506	50x37x <b>6200</b> mm	Blank


Item number	Length	Colour
R400535	60x38x <b>3300</b> mm	Blank

R420080/R420080-BE RS1 middle/ end clamp



R420081/ R420081-BE End clamp +

R420082/ R420082-BE Middle clamp +

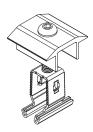

R420083/R420083-BE Cross rail connector+



R900241 UNI earth clamp

