


# Wall Cabinet Installation Guide





## STEP 1

Use the hole located on the wall and drill the installing hole.

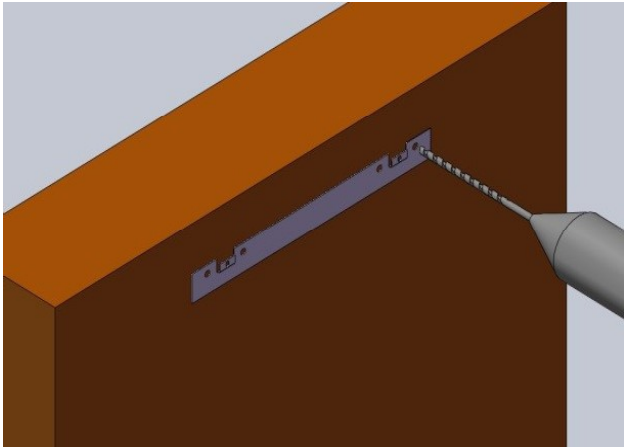



## STEP 2

Put M8 \* 100 mm Expansion Anchor Bolt into the installing hole, then screw nut, then fix the panel on the wall as shown below.

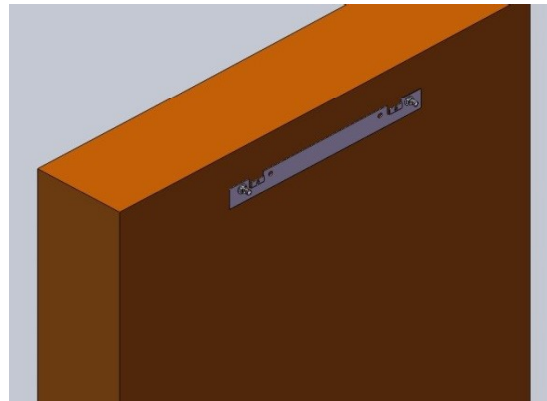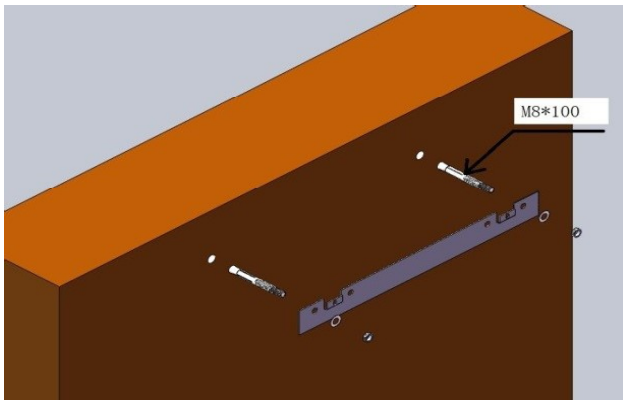

## STEP 3

Hang the cabinet on the panel as shown below.

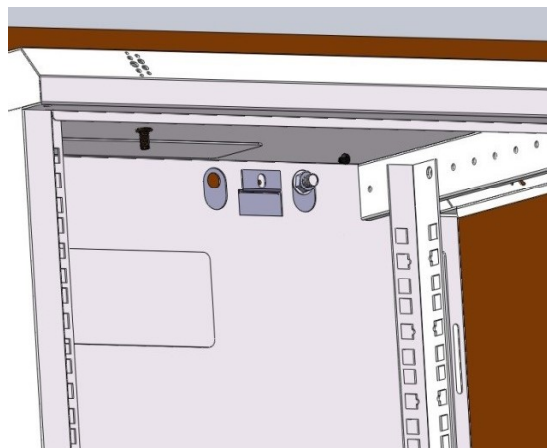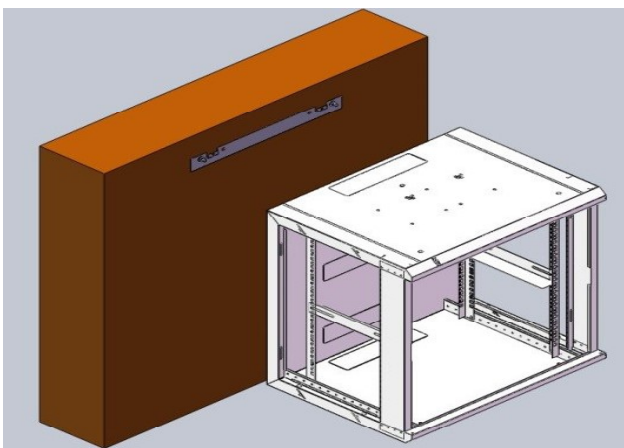

#### STEP 4

Use M3.5 \* 8 self-tapping screw to lock the panel, then install side panel and front door of wall mounted cabinet as below.

